


#### **Data sheet**

#### **Spare parts and accessories**

Pilot operated servo valves, types PM, PMC | Solenoid valves, types PML, PMLX Liquid level regulating valves, types PMFH, PMFL | Motorised valves, types MRV, MEV

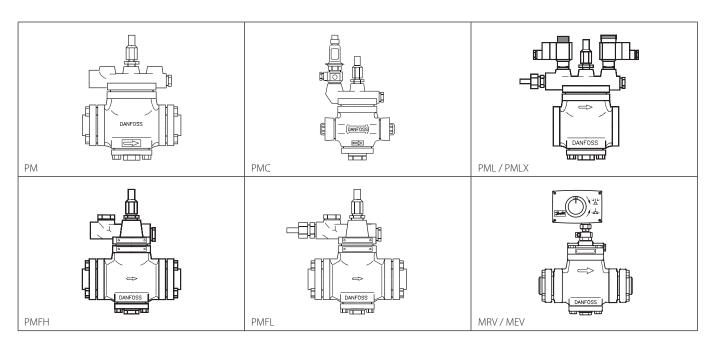

Valve type

Size

Valve type	Size	See details on page #	Code no.			
nspection kits						
	5	3 + 4	027F3075			
	10	3 + 4	027F3075			
	15	3 + 4	027F3075			
DAM	20	3 + 4	027F3075			
PM1 PM3	25	3 + 4	027F3075			
PMC1 PMC3	32	5 + 6	027F3076			
PML	40	7 + 8	027F3077			
PMLX MRV	50	9 + 10	027F3078			
INIUA	65	11 + 12	027F3079			
	80	13	027F3091			
	100	14	027F3092			
	125	15	027F3093			
	80-1	3 + 4	027F3075			
	80-2	3 + 4	027F3075			
	80-3	3 + 4	027F3075			
	80-4	3 + 4	027F3075			
PMFI	80-5	3 + 4	027F3075			
PMFH	80-6	3 + 4	027F3075			
MEV	80-7	3 + 4	027F3075			
	125	5 + 6	027F3076			
	200	7 + 8	027F3077			
	300	9 + 10	027F3078			
	500	11 + 12	027F3079			

Repair kits			
	5	16 + 17	027F3150
	10	16 + 17	027F3150
	15	16 + 17	027F3150
	20	16 + 17	027F3150
PM1	25	16 + 17	027F3150
PM3 PML	32	18 + 19	027F3152
PMLX	40	20 + 21	027F3153
MRV	50	22 + 23	027F3154
	65	24 + 25	027F3155
	80	26 + 27	027F3156
	100	28 + 29	027F3157
	125	30 + 31	027F3158
	80-1	16 + 17	027F3150
	80-2	16 + 17	027F3150
	80-3	16 + 17	027F3150
	80-4	16 + 17	027F3150
PMFI	80-5	16 + 17	027F3150
PMFH	80-6	16 + 17	027F3150
MEV	80-7	16 + 17	027F3150
	125	18 + 19	027F3152
	200	20 + 21	027F3153
	300	22 + 23	027F3154
	500	24 + 25	027F3155
	20-5	32	027F0555
PMC	20-8	32	027F0555
TIVIC	20-12	32	027F0555
	20-20	32	027F0555

See details on page #

Code no.

#### Inspection kits:

Contains all gaskets, O-rings and aluminium rings belonging to 1 valve size. For detailed content, see specific pages mentioned above.

#### Repair kits:

Contains all gaskets, O-rings and aluminium rings belonging to 1 valve size - also including valve seat and piston ring. For detailed content, see specific pages mentioned above.

#### Overhaul kits:

Contains all gaskets, O-rings and aluminium rings belonging to 1 valve size and parts what could be damaged or worn out. For detailed content, see specific pages mentioned above.




#### Data sheet | Spare parts and accessories for PM, PMC, PMLX, PMFL, PMFL, MRV and MEV

Valve type	Size	See details on page #	Code no.
Overhaul kits			
	20	33	027F3370
	25	34	027F3371
	32	35	027F3373
	40	36	027F3374
PM 1-3 Standard	50	37	027F3375
Staridard	65	38	027F3376
	80	39	027F3377
	100	40	027F3378
	125	41	027F3379
	5	42	027F3380
	10	43	027F3381
	15	44	027F3382
	32	45	027F3383
PM 1-3	40	46	027F3384
V-cone	50	47	027F3385
	65	48	027F3386
	80	49	027F3387
	100	50	027F3388
	125	51	027F3389
	32	52	027F0556
	40	53	027F0557
	50	54	027F0558
PML	65	55	027F0559
	80	56	027F0560
	100	57	027F0561
	125	58	027F0562
	32	59	027F0563
	40	60	027F0568
	50	61	027F0569
PMLX	65	62	027F0570
	80	63	027F0571
	100	64	027F0572
	125	65	027F0573
	5	66	027F0577
	10	67	027F0578
	15	68	027F0579
	20	69	027F0580
MRV	25	70	027F0581
	32	71	027F0582
	40	72	027F0583
	50	73	027F0584
	65	74	027F0592

Valve type	Size	See details on page #	Code no.
Overhaul kits			
	80-1	75	027F0611
	80-2	76	027F0631
	80-3	77	027F0632
	80-4	78	027F0633
PMFL	80-5	79	027F0634
PIVIFL	80-6	80	027F0635
	80-7	81	027F0636
	125	82	027F0637
	200	83	027F0638
	300	84	027F0639
	80-2	85	027F0663
	80-3	86	027F0669
	80-4	87	027F0676
	80-5	88	027F0677
PMFH	80-6	89	027F0678
PIMEH	80-7	90	027F0700
	125	91	027F0704
	200	92	027F0705
	300	93	027F0709
	500	94	027F0710
	80-2	95	027F0760
	80-4	96	027F0762
	80-5	97	027F0763
	80-6	98	027F0764
MEV	80-7	99	027F0765
	125	100	027F0766
	200	101	027F0767
	300	102	027F0768
	500	103	027F0769
	20-5	104	027F0770
DMC	20-8	105	027F0754
PMC	20-12	106	027F0755
	20-20	107	027F0756
ccessories - ICV P	M flanged valve h	ousings	
	25	108	027H2119
	32	108	027H3129
ICV PM	40	108	027H4128
	50	108	027H5127
	65	108	027H6128





#### Inspection kit | Code number 027F3075 PM, PMC, MRV, sizes 5 to 25 | MEV, PMFH, PMFL, sizes 80-1 to 80-7

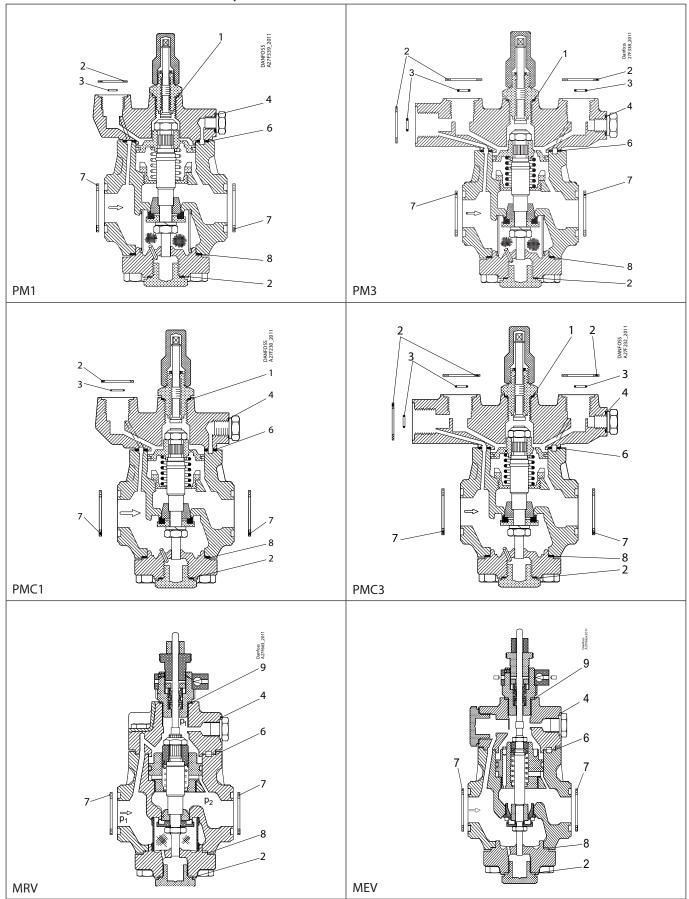



#### Inspection kit | Code number 027F3075 PM, PMC, MRV, sizes 5 to 25 | MEV, PMFH, PMFL, sizes 80-1 to 80-7

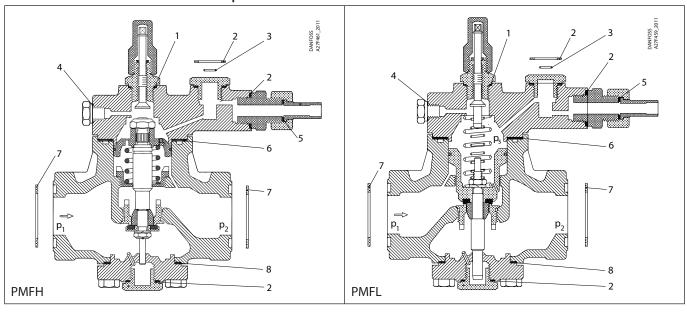


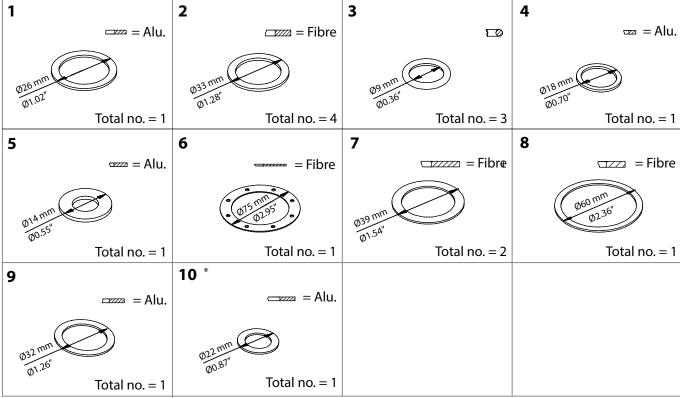

<sup>\*</sup>The spare part is included in the package but is not used for PM, PMC, MRV, sizes 5 to 25 or MEV, PMFH, PMFL, sizes 80-1 to 80-7




### Inspection kit | Code number 027F3076 PM, PML, PMLX, MRV, size 32 | MEV, PMFH, PMFL, size 125

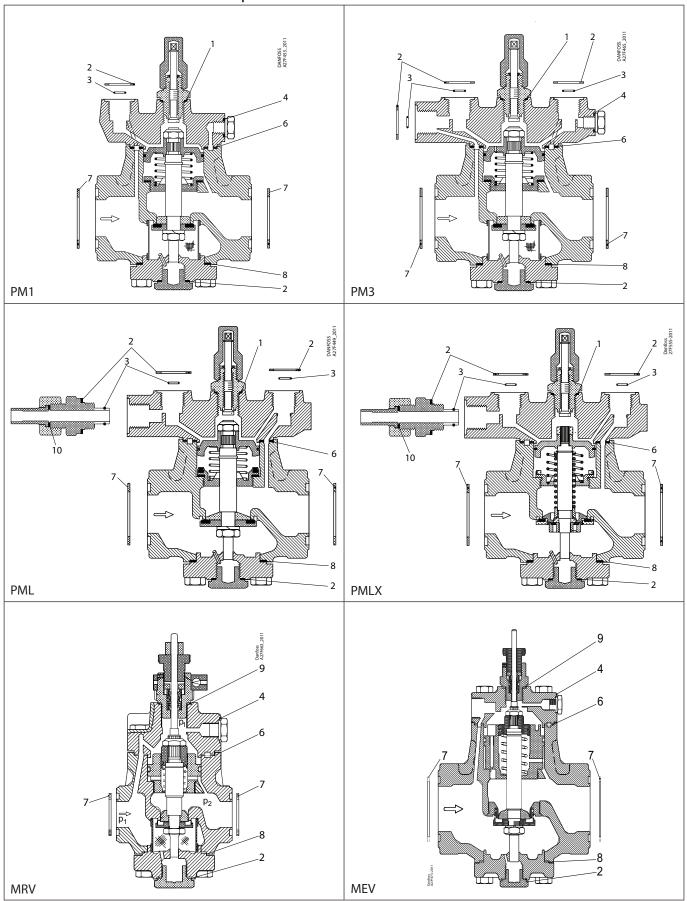




## Inspection kit | Code number 027F3076 PM, PML, PMLX, MRV, size 32 | MEV, PMFH, PMFL, size 125

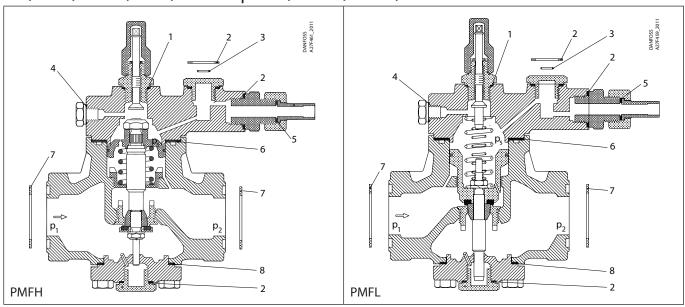

1	2	3	4
⊏zzz = Alu.	<i>□</i> = Fibre	EØ	□ = Alu.
Ø26 mm	Ø333 mm	09 mm 00 36"	Ø18 mm
Total no. = 1	Total no. = 4	Total no. = 3	Total no. = 1
5	6	7	8
□ = Alu.	= Fibre	= Fibre	= Fibre
Ø14 mm	085 mm	\$58 mm \$2.28"	Ø70 mm Ø2.76"
Total no. = 1	Total no. = 1	Total no. = 2	Total no. = 1
9	10		
= Alu.	= Alu.		
Ø126"	022 mm 00.87"		
Total no. = 1	Total no. = 1		





### Inspection kit | Code number 027F3077 PM, PML, PMLX, MRV, size 40 | MEV, PMFH, PMFL, size 200

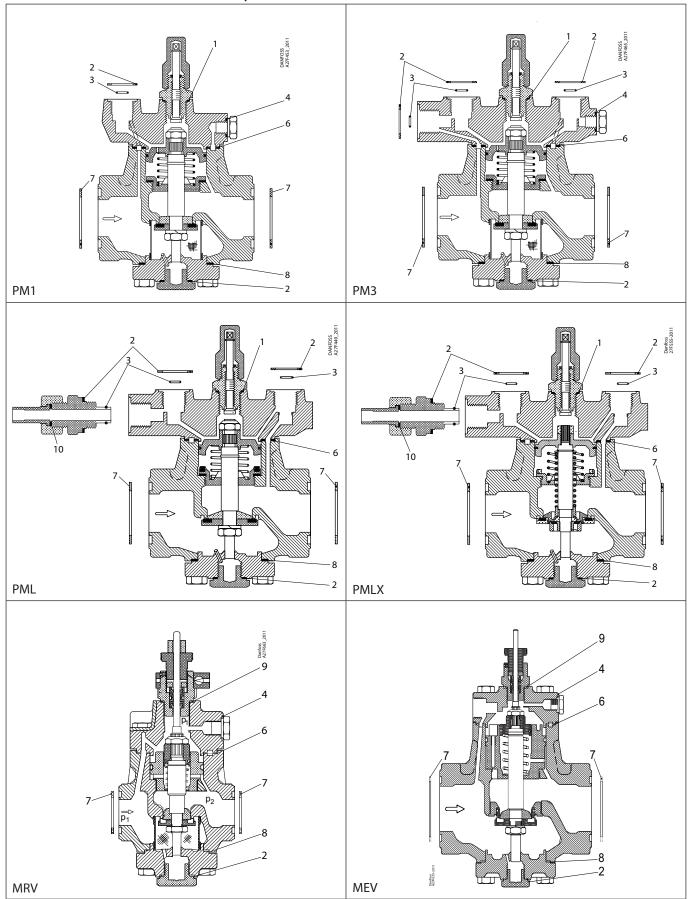




#### Inspection kit | Code number 027F3077 PM, PML, PMLX, MRV, size 40 | MEV, PMFH, PMFL, size 200

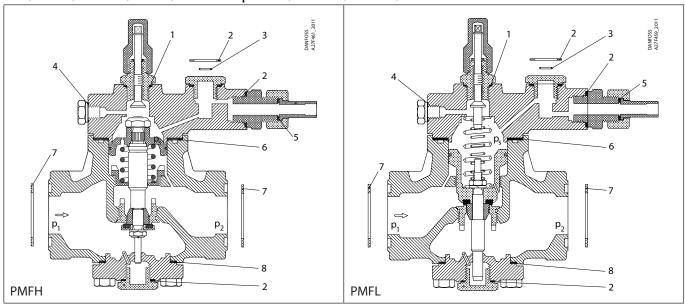

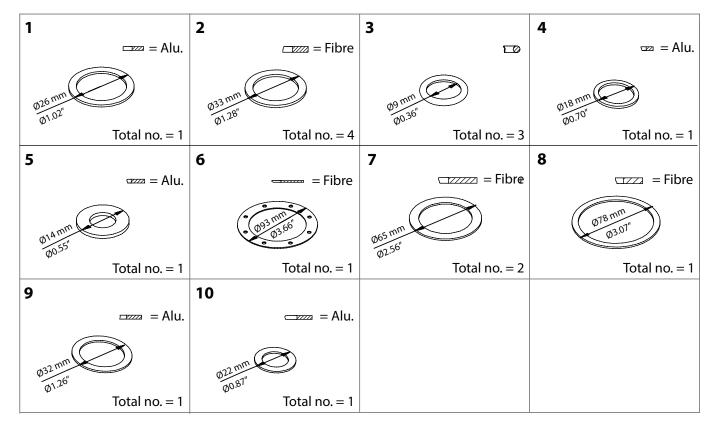





### Inspection kit | Code number 027F3078 PM, PML, PMLX, MRV, size 50 | MEV, PMFH, PMFL, size 300

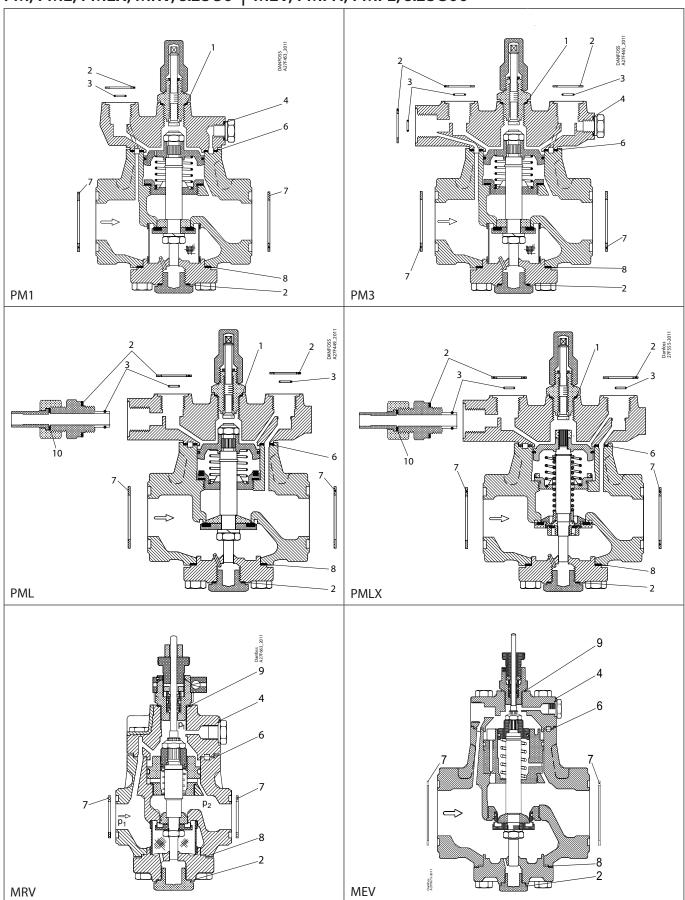




#### Inspection kit | Code number 027F3078 PM, PML, PMLX, MRV, size 50 | MEV, PMFH, PMFL, size 300

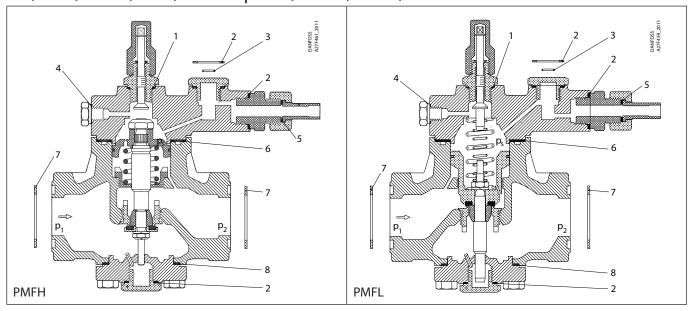

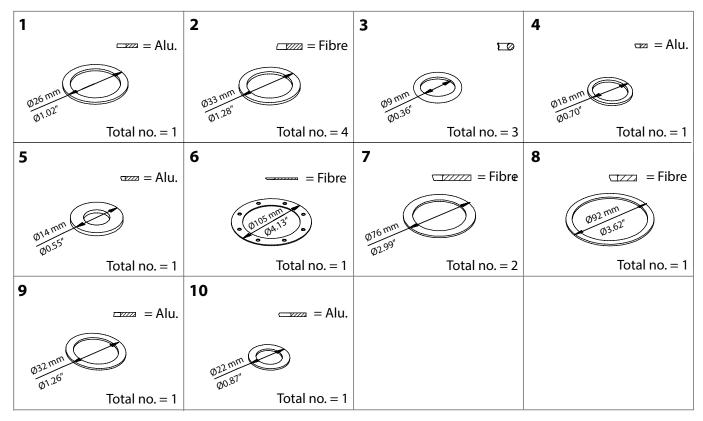





### Inspection kit | Code number 027F3079 PM, PML, PMLX, MRV, size 65 | MEV, PMFH, size 500

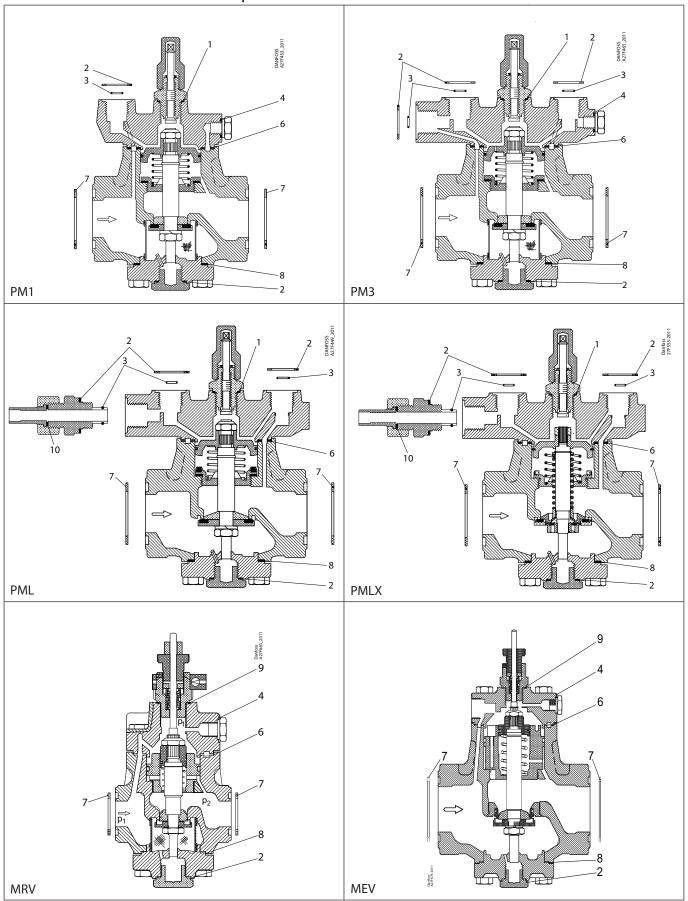




#### Inspection kit | Code number 027F3079 PM, PML, PMLX, MRV, size 65 | MEV, PMFH, size 500

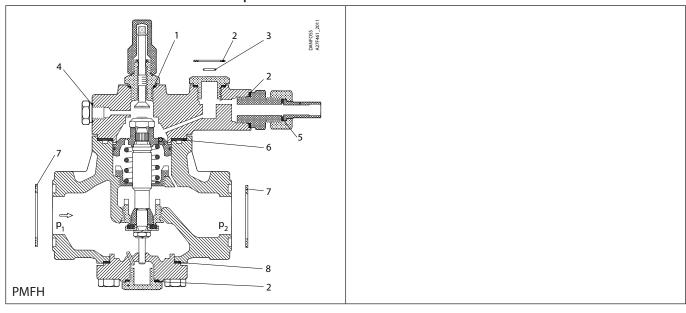

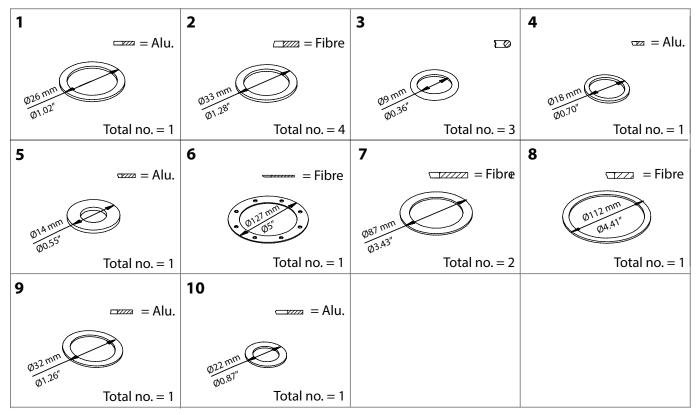



# Inspection kit | Code number 027F3091 PM, PML, PMLX, size 80

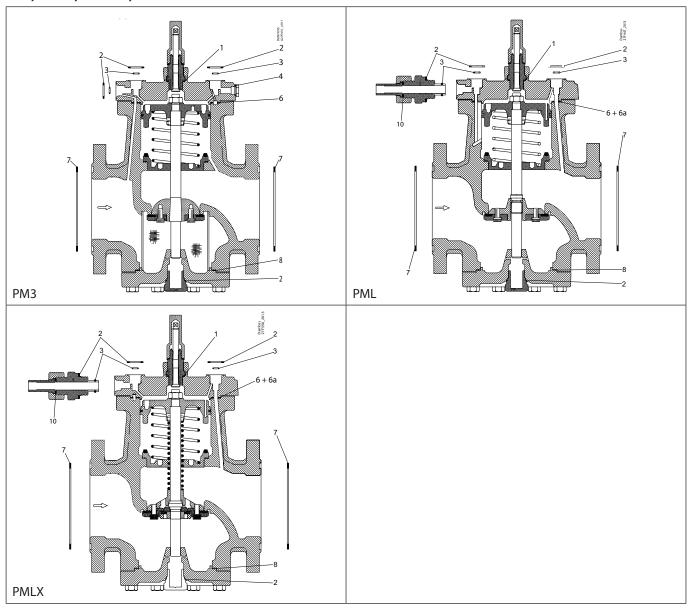



1	2	3	4	5*	6
⊏ = Alu.	<i>⊏</i> zzzz = Fibre	E	□ = Alu.	□zzzz = Alu.	= Fibre
Ø26 mm	Ø33 mm Ø1.28"	09 mm 0036"	Ø18 mm	014 mm 0055"	(0154 min) (00 06 06 06 06 06 06 06 06 06 06 06 06 0
Total no. = 1	Total no. = 4	Total no. = 3	Total no. = 1	Total no. = 1	Total no. = 1
6a	7	8	9*	10	
<b>6a</b> = Fibre	7 = Fibre	<b>8</b> □ = Fibre	<b>9</b> * = Alu.	<b>10</b>	
= Fibre	7	= Fibre	_		

 $<sup>^{\</sup>ast}$  The spare part is included in the package but is not used for PM, PML, PMLX 100



# Inspection kit | Code number 027F3092 PM, PML, PMLX, size 100

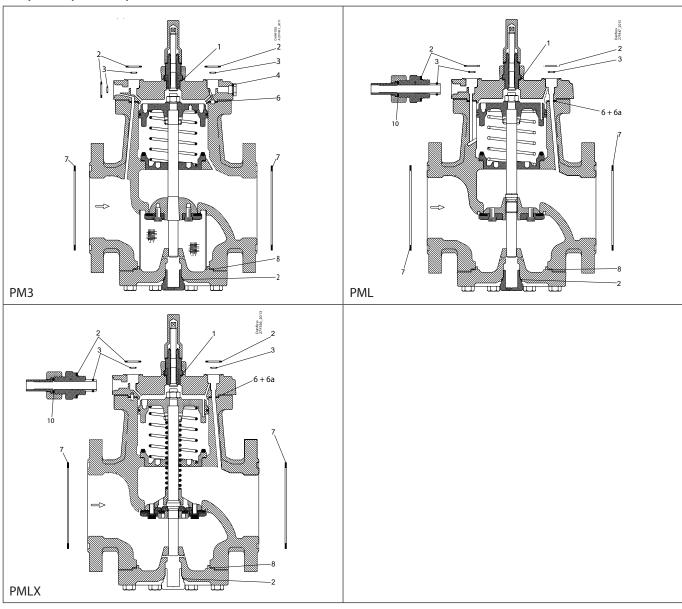


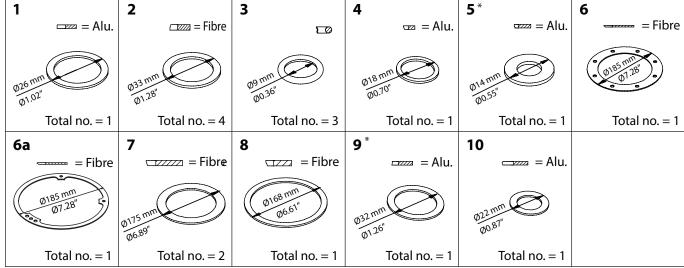

<sup>\*</sup> The spare part is included in the package but is not used for PM, PML, PMLX 100



# Inspection kit | Code number 027F3093 PM, PML, PMLX, size 125

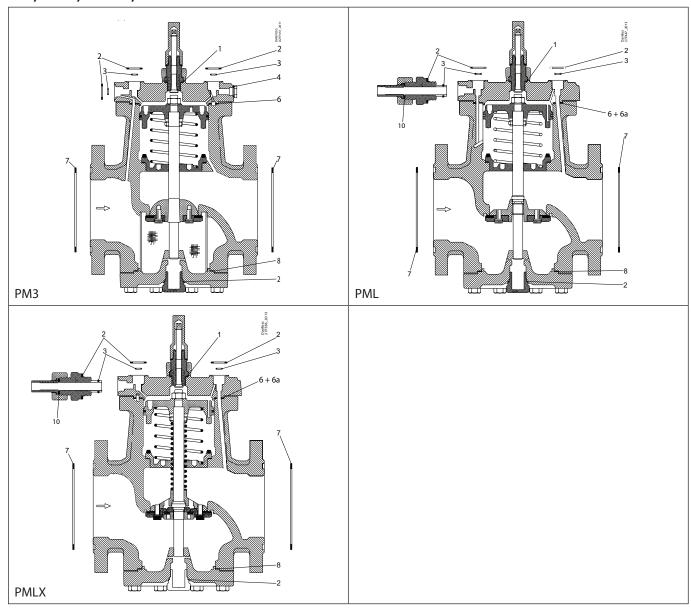


1	2	3	4	<b>5</b> *	6
⊏ = Alu.	⊂zzzz = Fibre	□	□ = Alu.	= Alu.	= Fibre
0.76 mm 01.02"	033 mm 01.28"	00.36"	Ø18 mm	Ø14mm	022 mm
Total no. = 1	Total no. = 4	Total no. = 3	Total no. = 1	Total no. = 1	Total no. = 1
6a	7	8	9 *	10	
= Fibre	= Fibre	= Fibre	⊏zzz = Alu.	←zzzz = Alu.	
0221 mm 08.7"	Ø203 mm Ø199"	Ø196 mm Ø1.72"	Ø32 mm	022 mm 00.81"	
Total no. = 1	Total no. = 2	Total no. = 1	Total no. = 1	Total no. = 1	

<sup>\*</sup> The spare part is included in the package but is not used for PM, PML, PMLX 125



#### Repair kit | Code number 027F3150 PM, MRV, size 5 to 25 | MEV, PMFH, PMFL, sizes 80-1 to 80-7

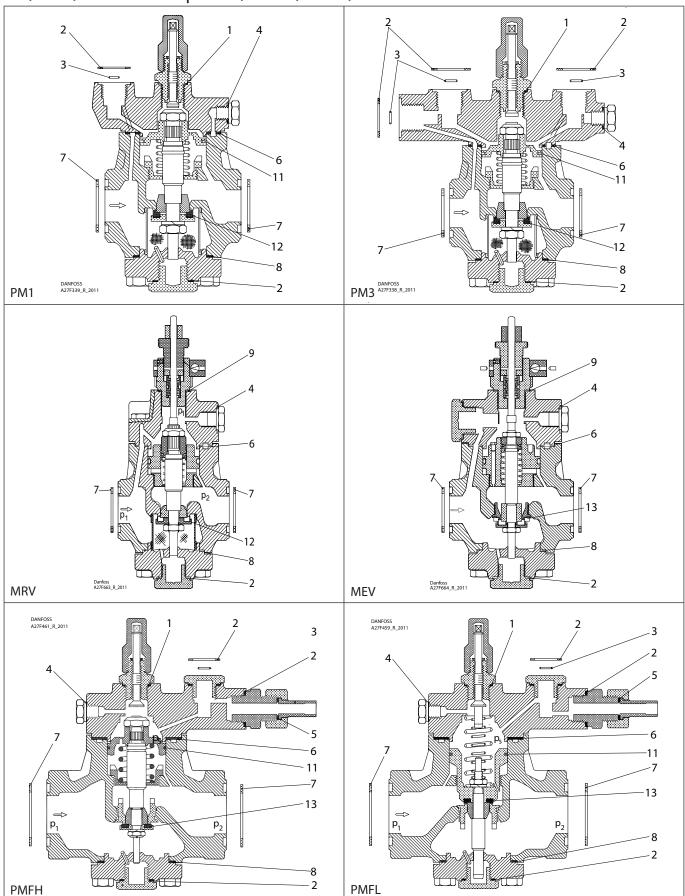




### Repair kit | Code number 027F3150 PM, MRV, size 5 to 25 | MEV, PMFH, PMFL, sizes 80-1 to 80-7

<b>1</b> □ □ = Alu.	2 = Fibre	3 🐷	<b>4</b> □ = Alu.	<b>5</b>	<b>6</b> = Fibre
Ø1 02°	Ø33 mm Ø128"	09 mm 00 36"	Ø18 mm	Ø14 mm	015 mm
Total no. = 1	Total no. = 4	Total no. = 3	Total no. = 1	Total no. = 1	Total no. = 1
7 = Fibre	8 = Fibre	<b>9</b> □ □ = Alu.	<b>10</b> *  ———————————————————————————————————	11	12
Ø39 mm Ø1.54'	060 mm 0236"	Ø32 mm Ø126"	012 mm 00.87"	050 mm	932 mm
Total no. = 2	Total no. = 1	Total no. = 1	Total no. = 1	Total no. = 1	Total no. = 1
13 \$\text{\tin}\text{\ti}\}\tittt{\text{\text{\texi}\text{\text{\texi}\text{\text{\tex{\texicl{\text{\texi}\text{\texi}\\\ \texittt{\text{\texictex{\texit{\texi{\texi{\texi{\texi{\texi{\texi{\texi{\texi{\ti	14  Ø10  Ø10  Ø10  Ø10  Ø10  Ø10  Ø10  Ø				
Total no. = 1	Total no. = 1				

 $<sup>^{*}</sup>$  The spare part is included in the package but is not used for PM, MRV 5 to 25 or MEV, PMFH, PMFL 80-1 to 80-7





#### Repair kit | Code number 027F3152 PM, PML/X, MRV, size 32 | MEV, PMFH/L, size 125

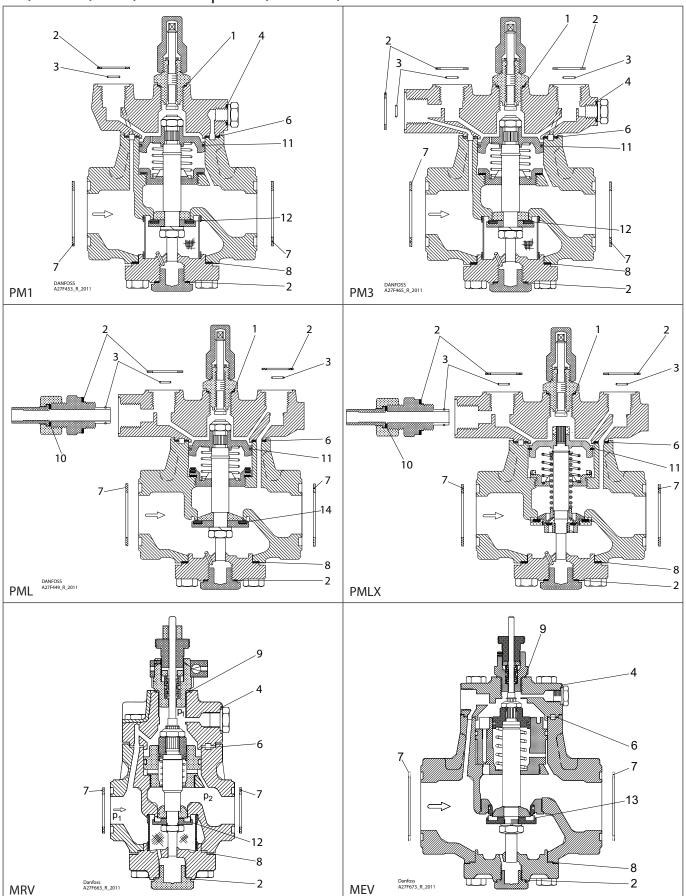




#### Repair kit | Code number 027F3152 PM, PML/X, MRV, size 32 | MEV, PMFH/L, size 125

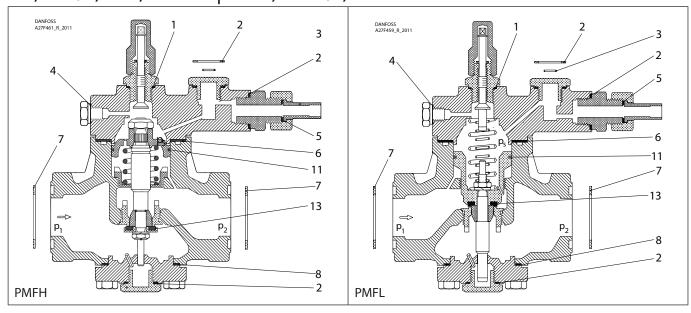

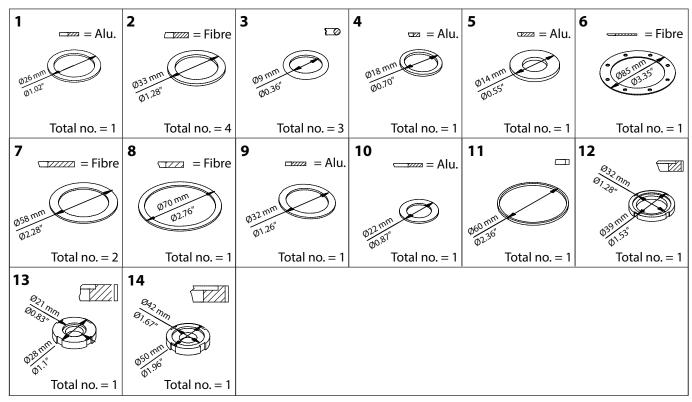





Repair kit | Code number 027F3153 PM, PML/X, MRV, size 40 | MEV, PMFH/L, size 200

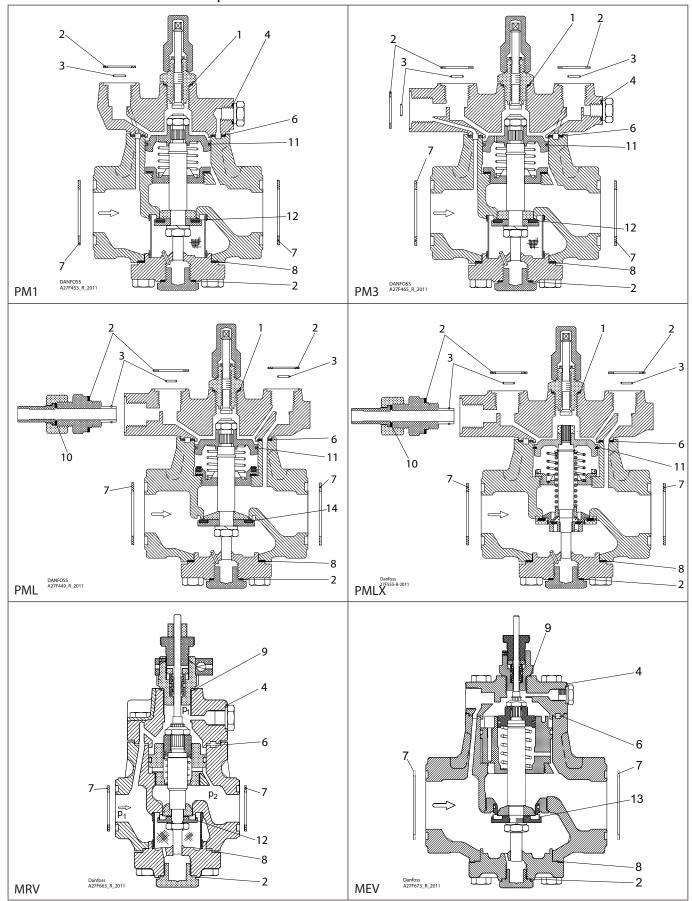




#### Repair kit | Code number 027F3153 PM, PML/X, MRV, size 40 | MEV, PMFH/L, size 200

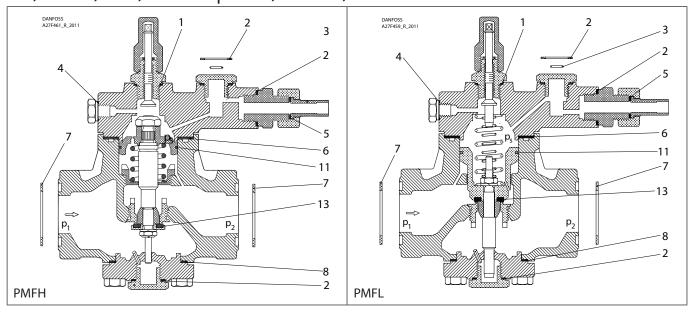

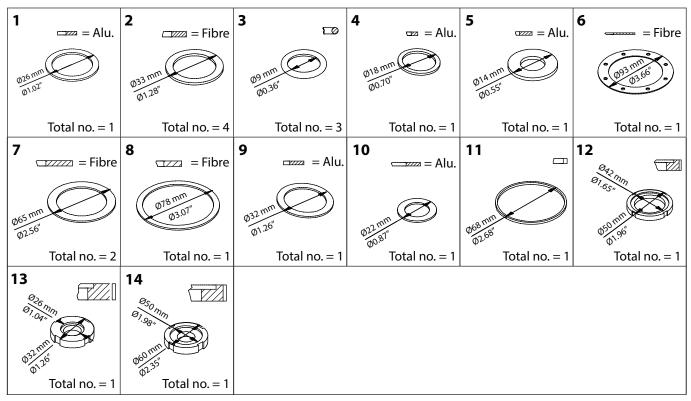





Repair kit | Code number 027F3154 PM, PML/X, MRV, size 50 | MEV, PMFH/L, size 300

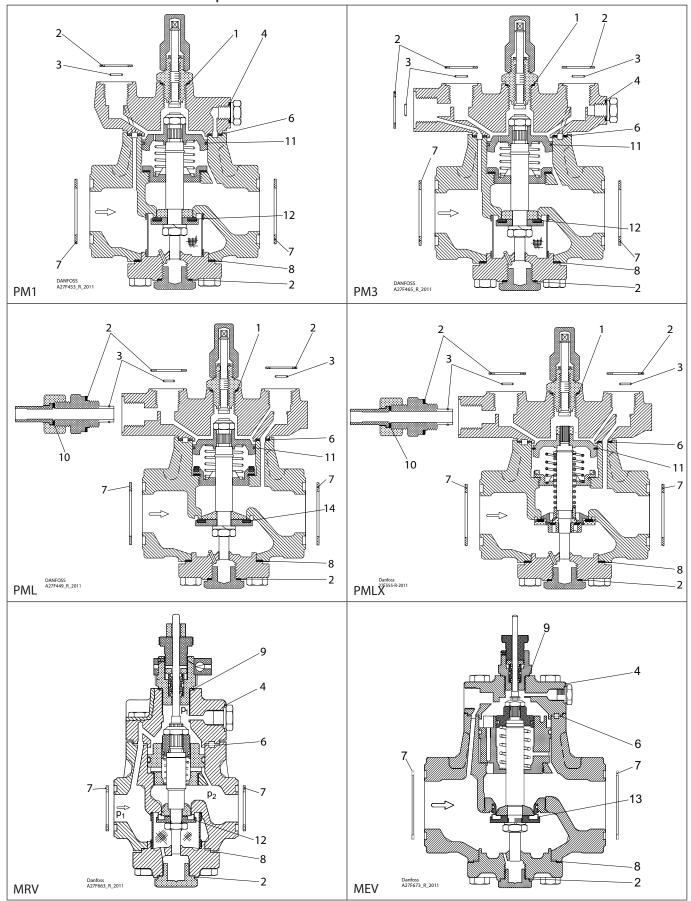




#### Repair kit | Code number 027F3154 PM, PML/X, MRV, size 50 | MEV, PMFH/L, size 300

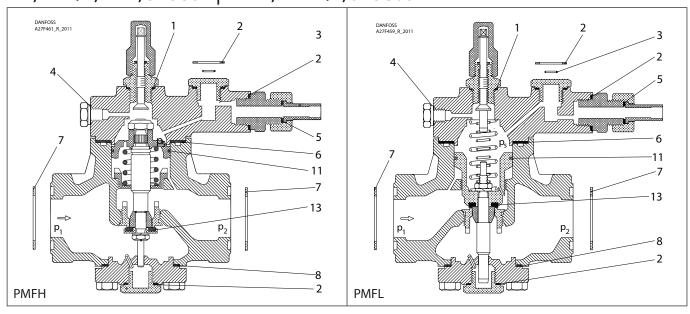

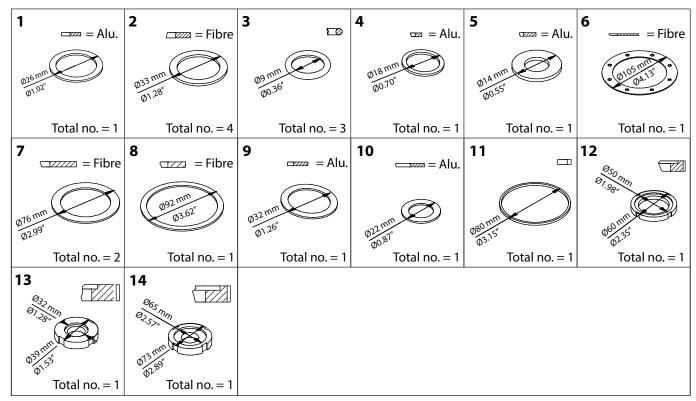





Repair kit | Code number 027F3155 PM, PML/X, MRV, size 65 | MEV, PMFH, size 500

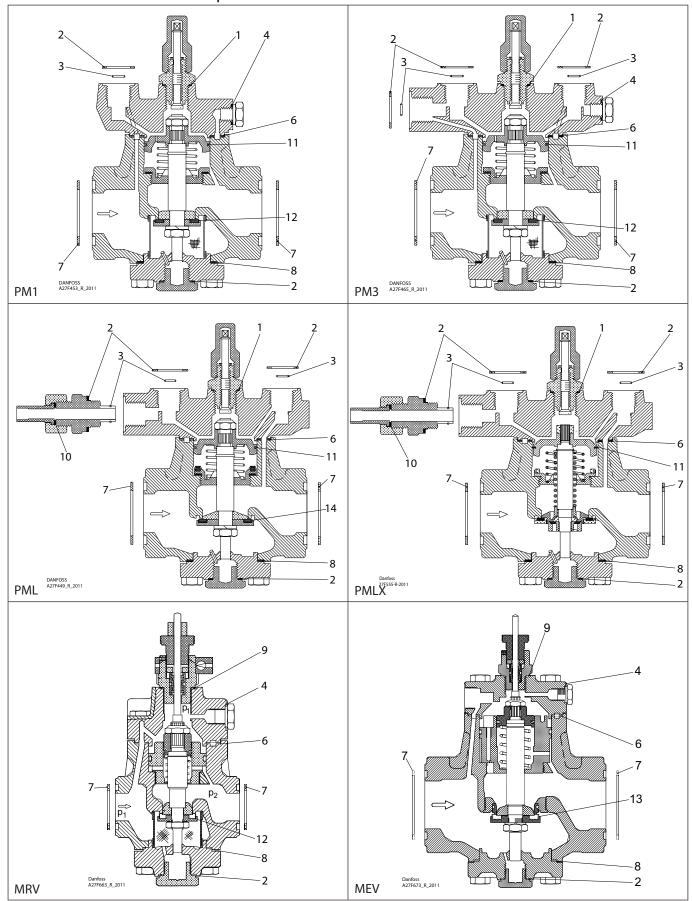




#### Repair kit | Code number 027F3155 PM, PML/X, MRV, size 65 | MEV, PMFH, size 500

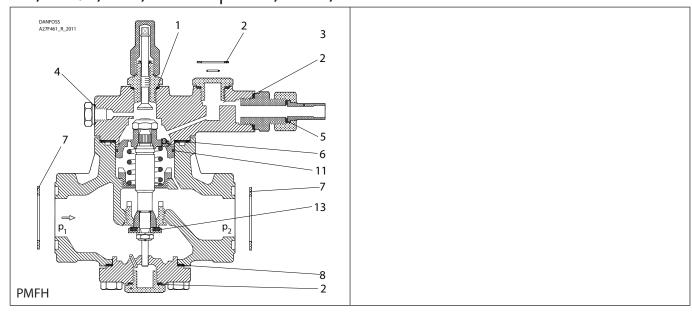

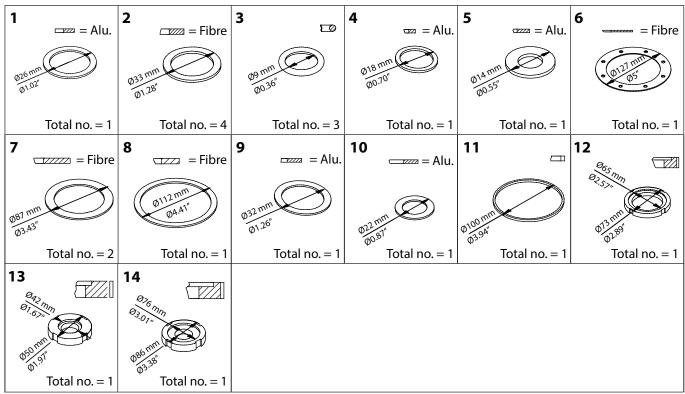




# Repair kit | Code number 027F3156 PM, PML/X, size 80

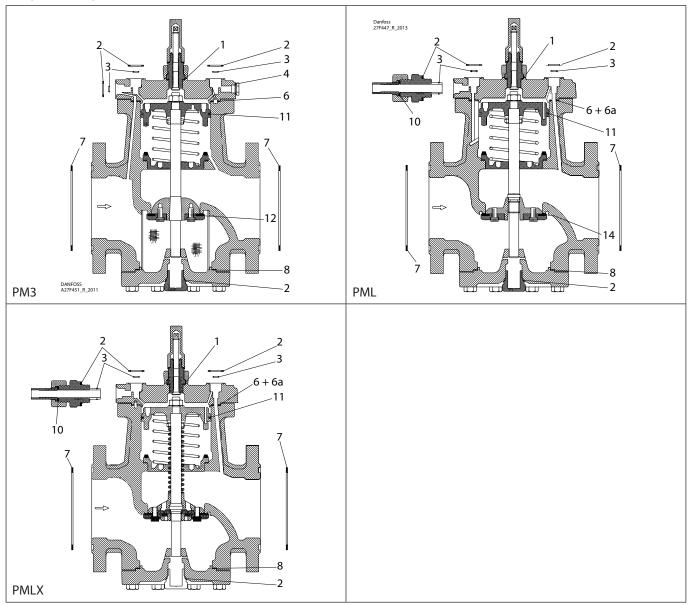




# Repair kit | Code number 027F3156 PM, PML/X, size 80

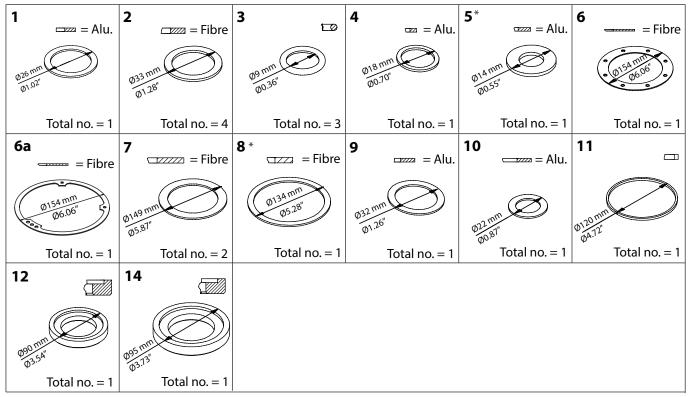

 $<sup>^{\</sup>ast}$  The spare part is included in the package but is not used for PM, PML/X 80.




# Repair kit | Code number 027F3157 PM, PML/X, size 100

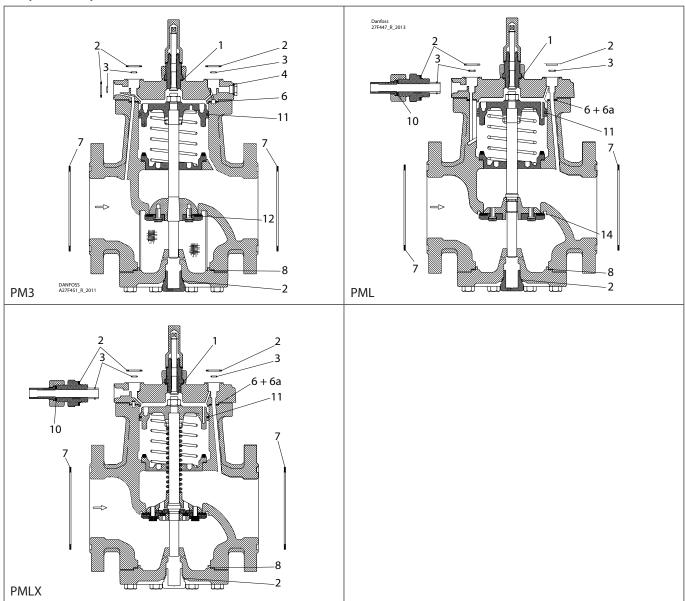




# Repair kit | Code number 027F3157 PM, PML/X, size 100

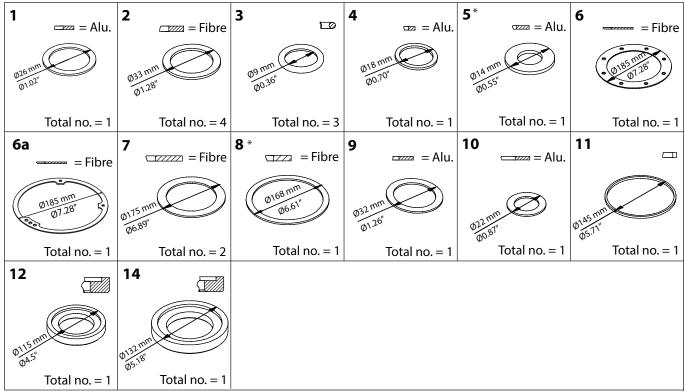

<sup>\*</sup>The spare part is included in the package but is not used for PM, PML/X 100.




# Repair kit | Code number 027F3158 PM, PML/X, size 125

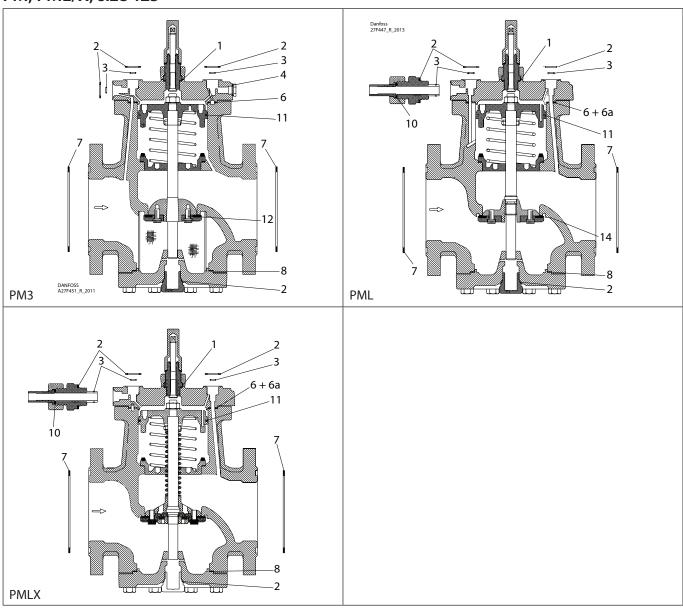




# Repair kit | Code number 027F3158 PM, PML/X, size 125

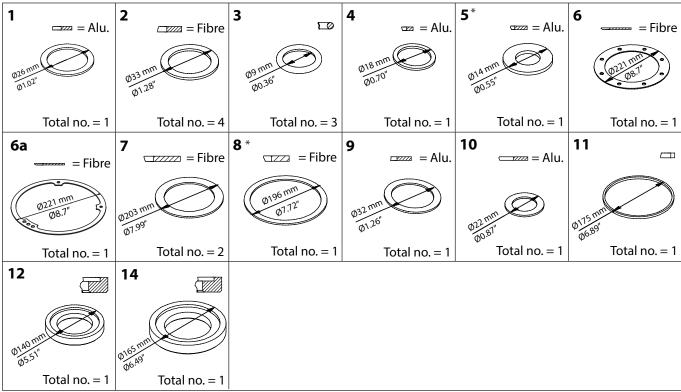


<sup>\*</sup> The spare part is included in the package but is not used for PM, PML/X 125.



# Repair kit | Code number 027F0555 PMC, size 20-5, 20-8, 20-12 and 20-20

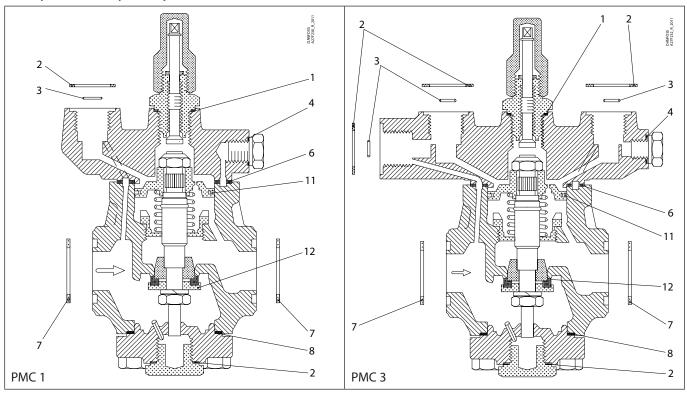


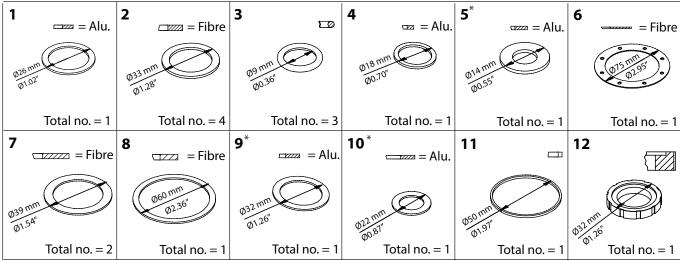


<sup>\*</sup> The spare part is included in the package but is not used for PMC 1 and 3.



# Overhaul kit | Code number 027F3370 PM, size 20

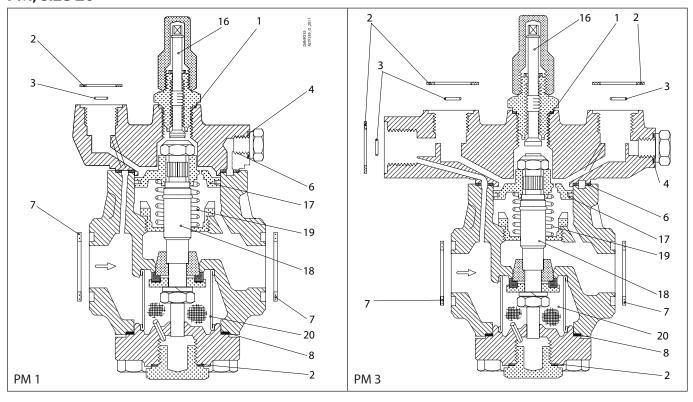


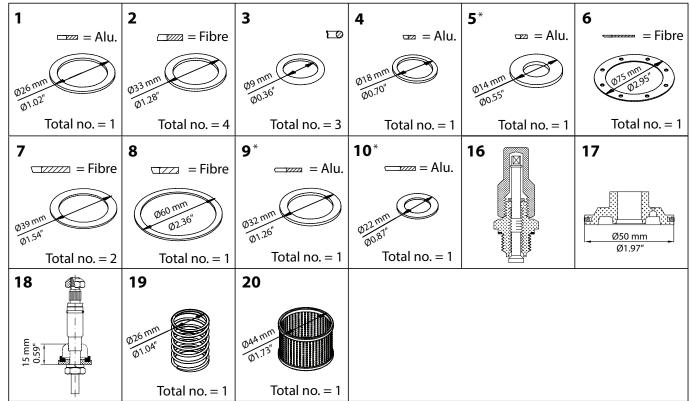


<sup>\*</sup> The spare part is included in the package but is not used for PM 1 or PM 3..



# Overhaul kit | Code number 027F3371 PM, size 25

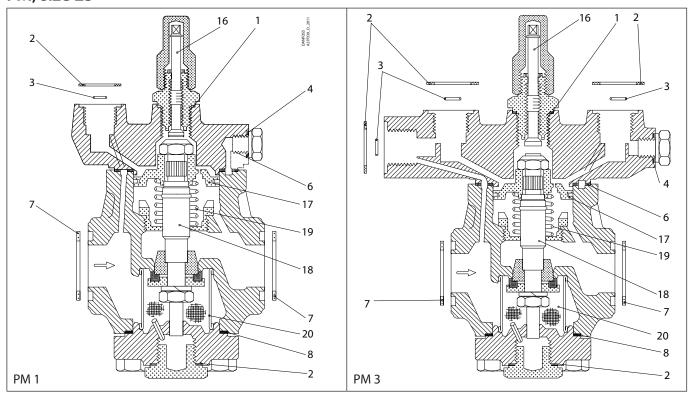


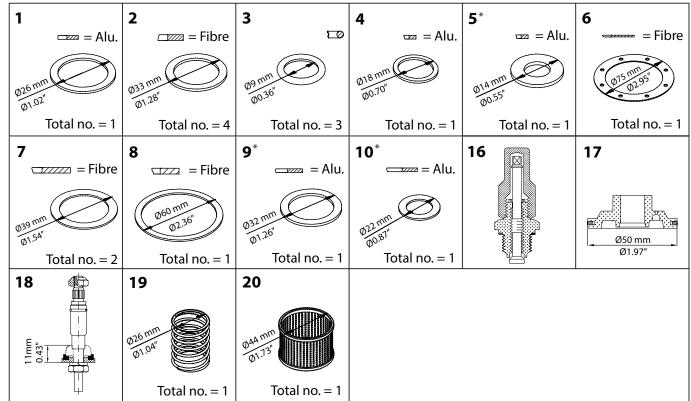

<sup>\*</sup> The spare part is included in the package but is not used for PM 1 or PM 3..



#### Overhaul kit | Code number 027F3373 PM, size 32 - standard cone

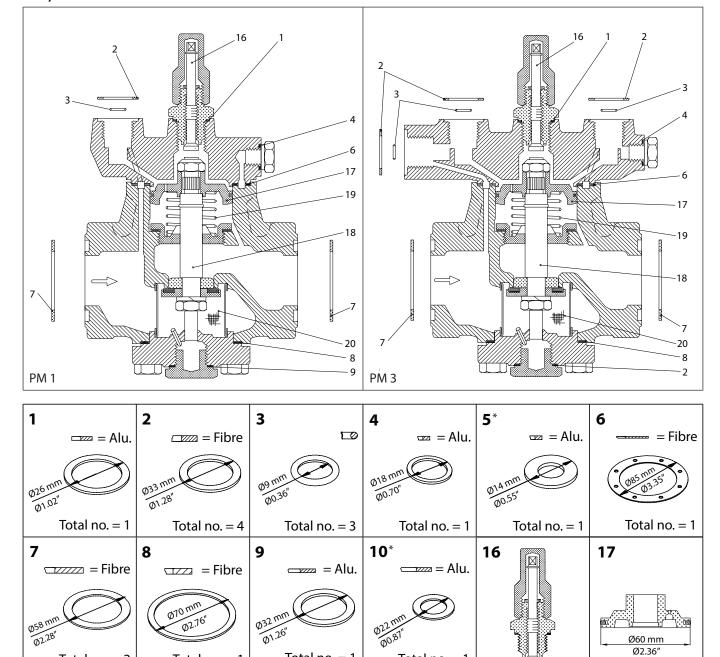

Total no. = 1

Total no. = 1

Total no. = 1

Total no. = 1

20

Total no. = 2

19


18

Ø32 mm Ø1.26"

Total no. = 1\* The spare part is included in the package but is not used for PM 1 or PM 3 with standard cone.



#### Overhaul kit | Code number 027F3374 PM, size 40 - standard cone

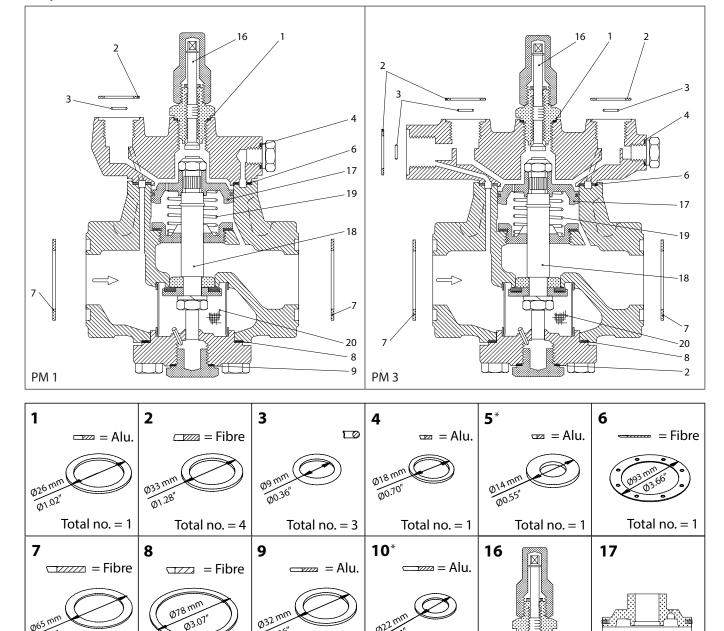

Total no. = 1

Total no. = 1

Total no. = 1

Total no. = 1

20

Total no. = 2

19

18


Ø42 mm Ø1.65"


Ø68 mm Ø2.68"

Total no. = 1\* The spare part is included in the package but is not used for PM 1 or PM 3 with standard cone.



# Overhaul kit | Code number 027F3375 PM, size 50 - standard cone

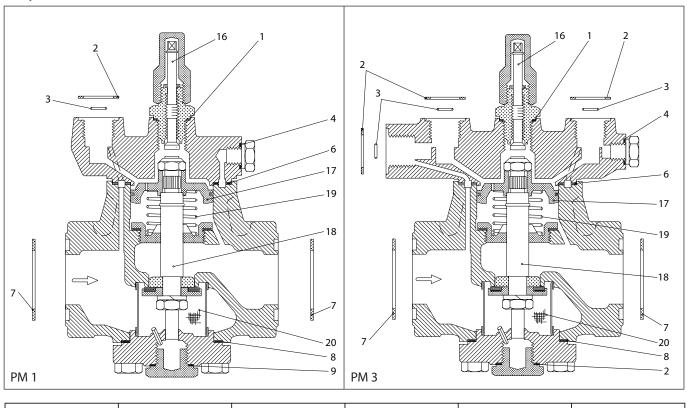


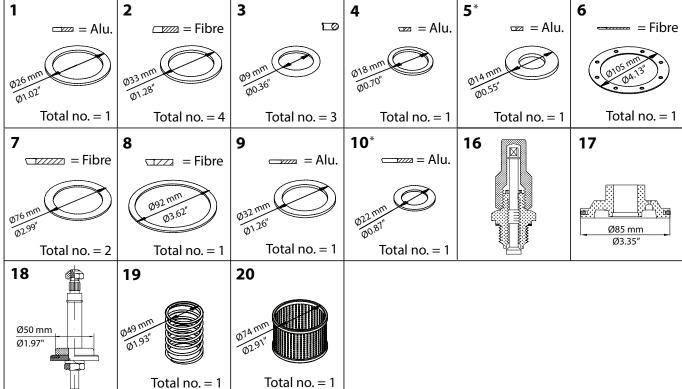


<sup>\*</sup> The spare part is included in the package but is not used for PM 1 or PM 3 with standard cone.



# Overhaul kit | Code number 027F3376 PM, size 65 - standard cone

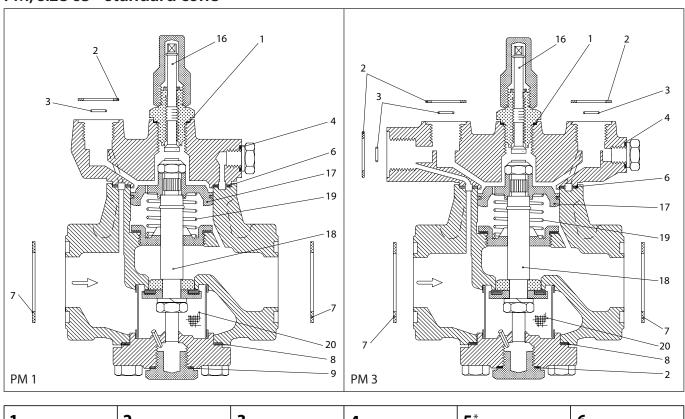


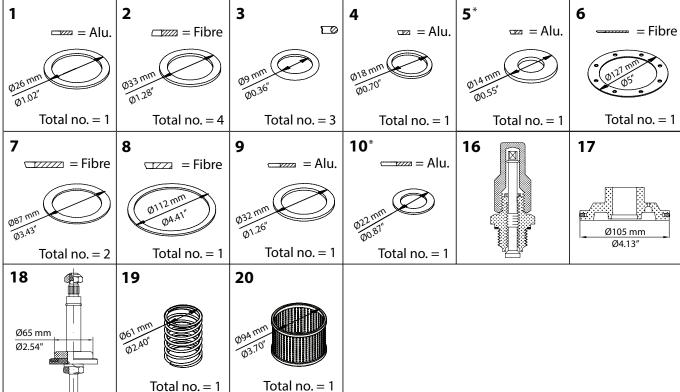


<sup>\*</sup> The spare part is included in the package but is not used for PM 1 or PM 3 with standard cone.



# Overhaul kit | Code number 027F3377 PM, size 80 - standard cone

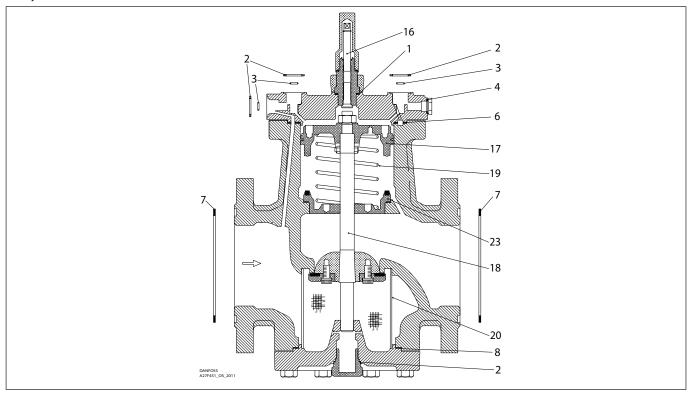

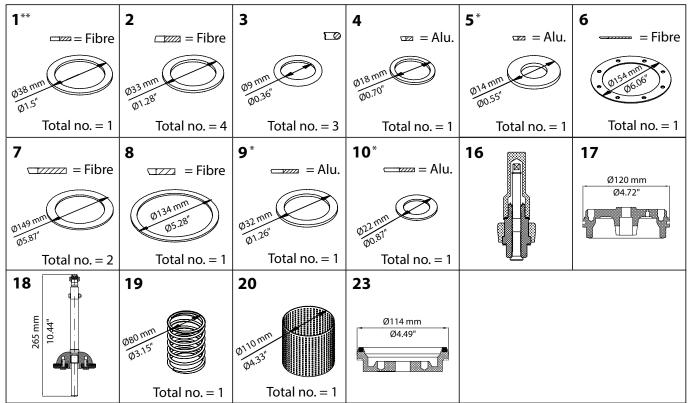



<sup>\*</sup> The spare part is included in the package but is not used for PM size 80 with standard cone.

<sup>\*\*</sup> Included in manual opening device.



#### Overhaul kit | Code number 027F3378 PM, size 100 - standard cone

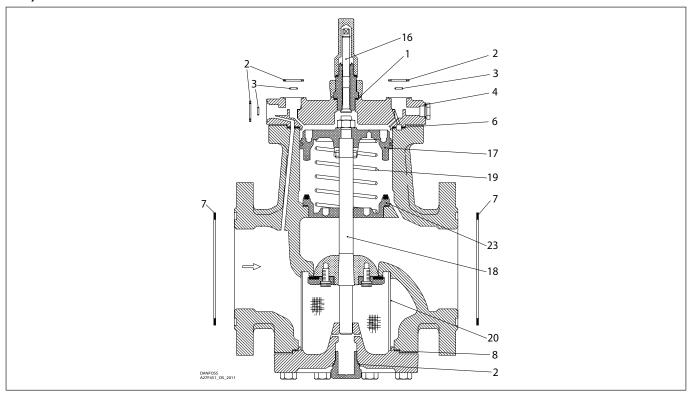


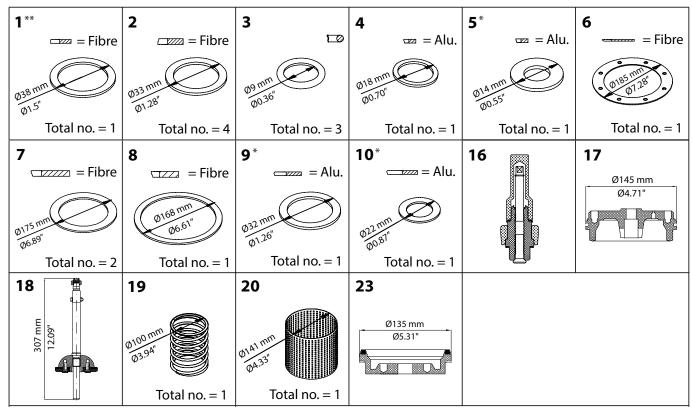


<sup>\*</sup> The spare part is included in the package but is not used for PM size 100 with standard cone. \*\* Included in manual opening device.



#### Overhaul kit | Code number 027F3379 PM, size 125 - standard cone

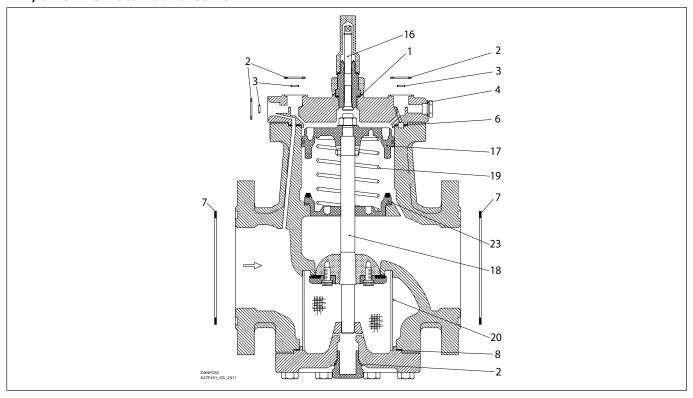


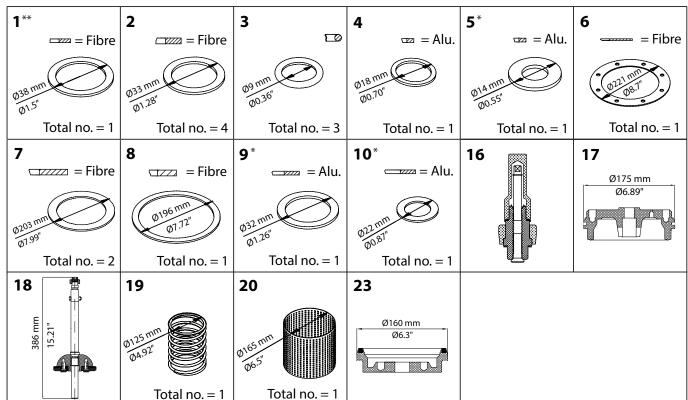


<sup>\*</sup> The spare part is included in the package but is not used for PM size 125 with standard cone.
\*\* Included in manual opening device.



#### Overhaul kit | Code number 027F3380 PM, size 5

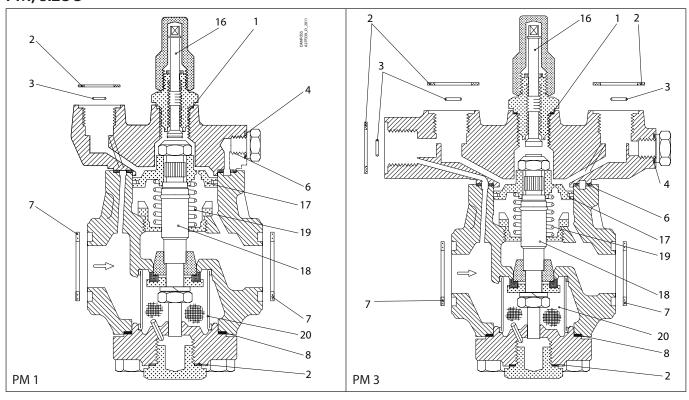


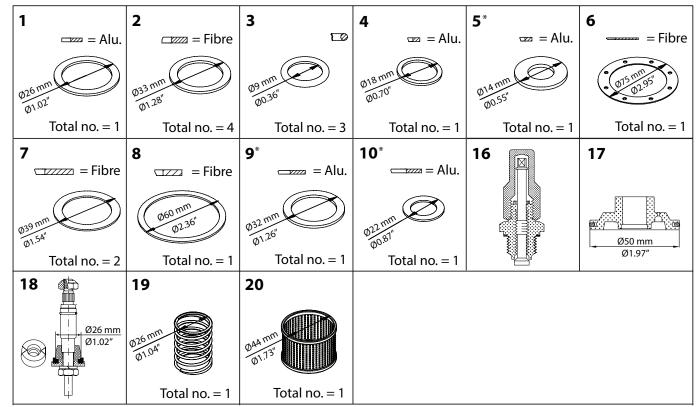


 $<sup>\</sup>ensuremath{^{*}}$  The spare part is included in the package but is not used for PM 1 or PM 3..



#### Overhaul kit | Code number 027F3381 PM, size 10

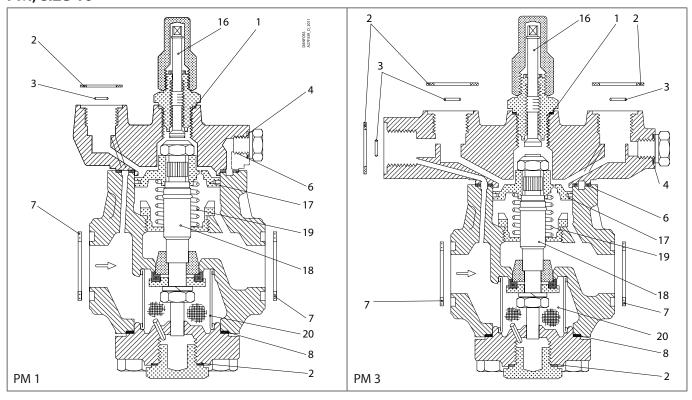


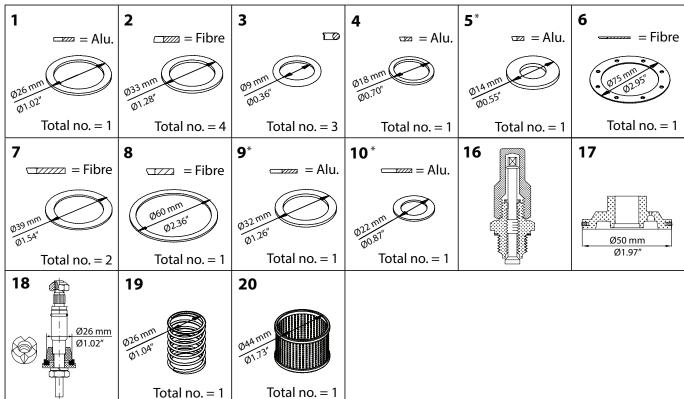


 $<sup>^{\</sup>ast}$  The spare part is included in the package but is not used for PM 1 or PM 3..



#### Overhaul kit | Code number 027F3382 PM, size 15

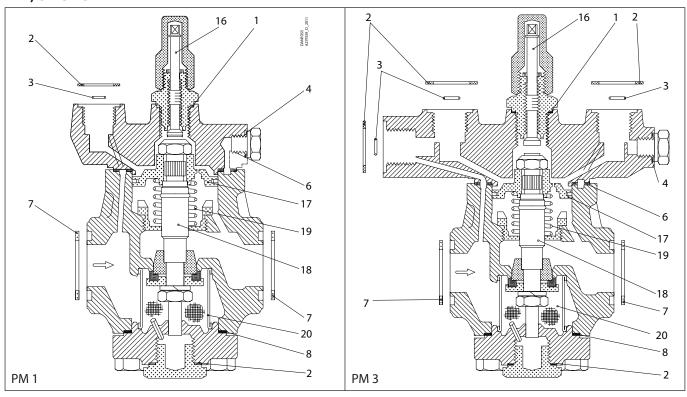


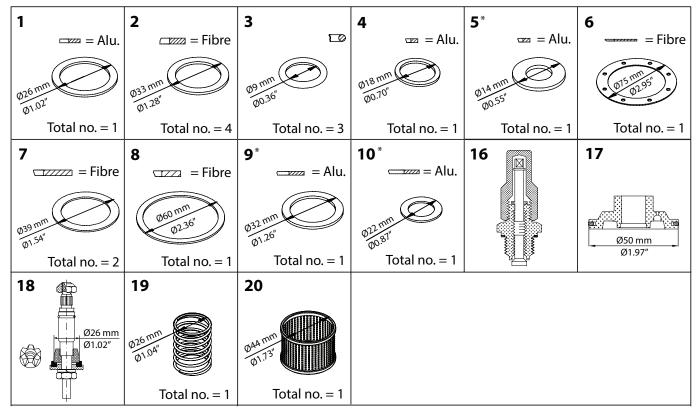

 $<sup>^{*}</sup>$  The spare part is included in the package but is not used for PM 1 or PM 3..



#### Overhaul kit | Code number 027F3383 PM, size 32 V-cone

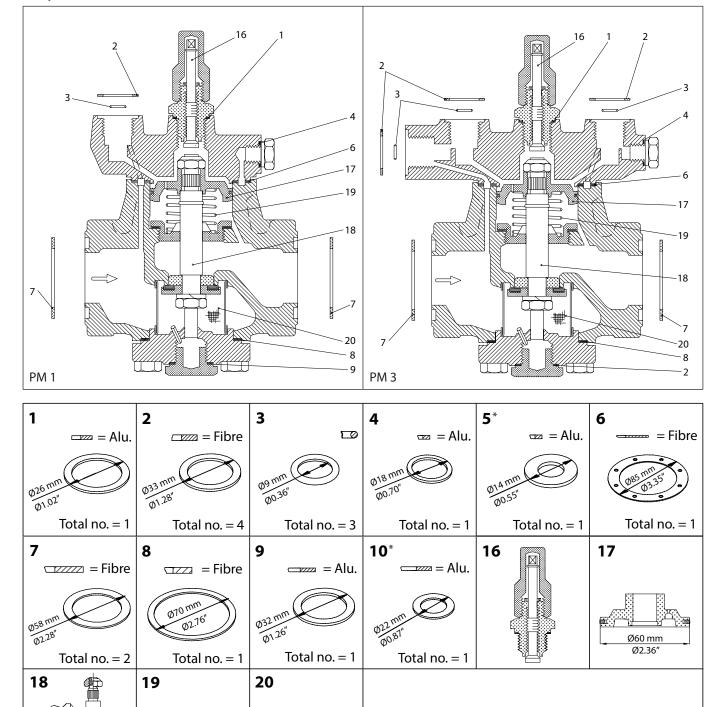

Total no. = 1


Total no. = 1


Ø32 mm Ø1.26"

 $<sup>^{\</sup>ast}$  The spare part is included in the package but is not used for PM 1 or PM 3 with V-cone.



#### Overhaul kit | Code number 027F3384 PM, size 40 V-cone

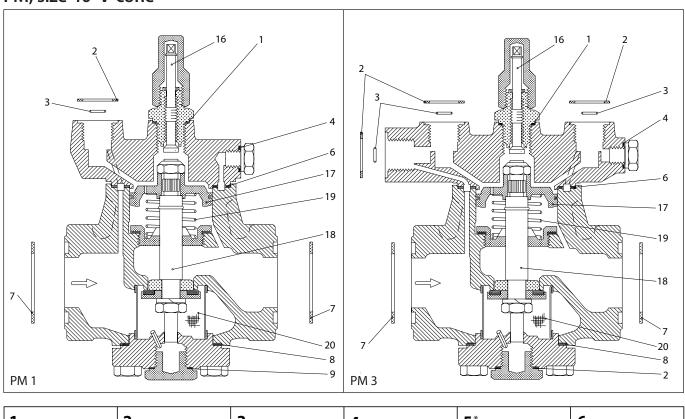


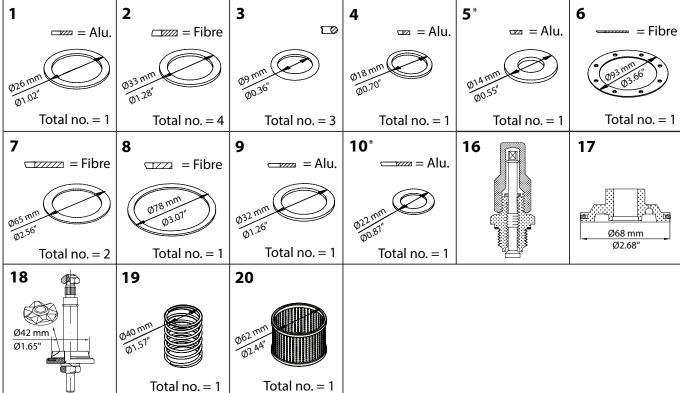

 $<sup>^{*}</sup>$  The spare part is included in the package but is not used for PM 1 or PM 3 with V-cone.



# Overhaul kit | Code number 027F3385 PM, size 50 V-cone

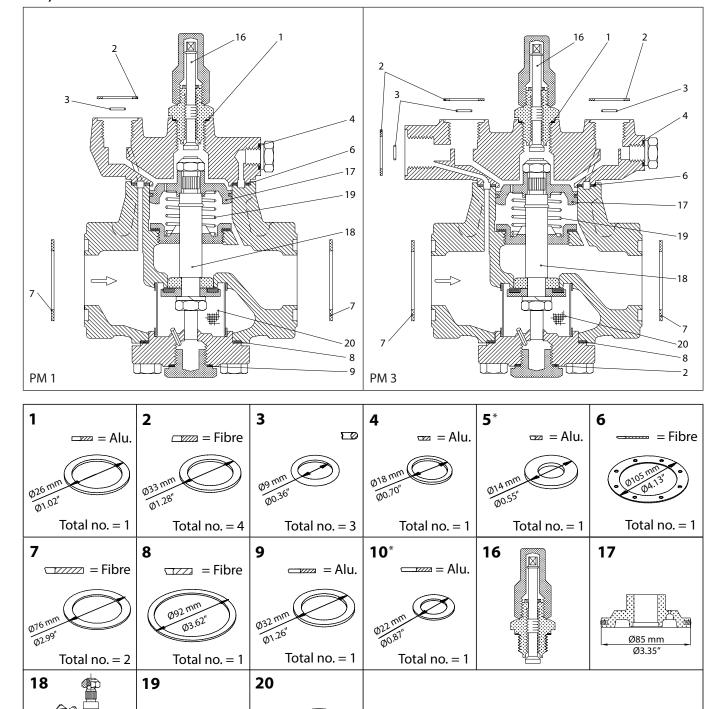

Total no. = 1


Total no. = 1


Ø50 mm

 $<sup>^{*}</sup>$  The spare part is included in the package but is not used for PM 1 or PM 3 with V-cone.



# Overhaul kit | Code number 027F3386 PM, size 65 V-cone

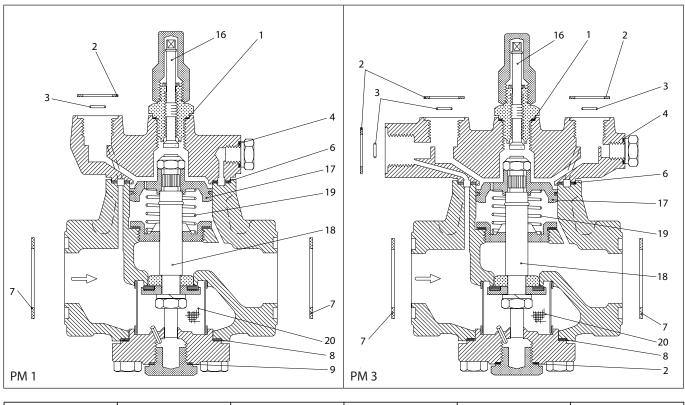


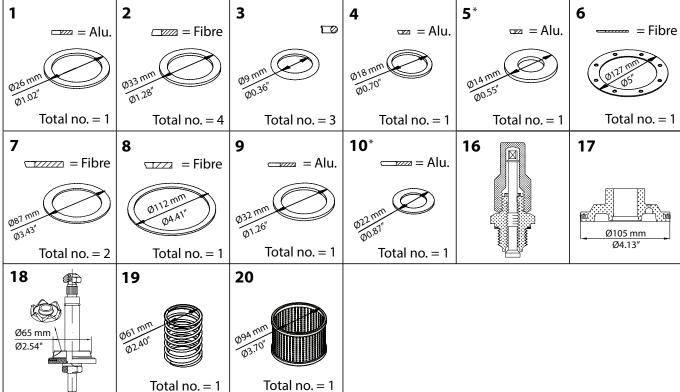


<sup>\*</sup> The spare part is included in the package but is not used for PM 1 or PM 3 with V-cone.



#### Overhaul kit | Code number 027F3387 PM, size 80 - V-cone

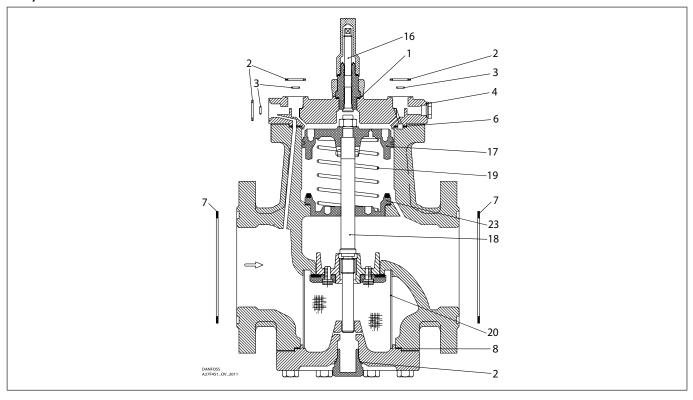


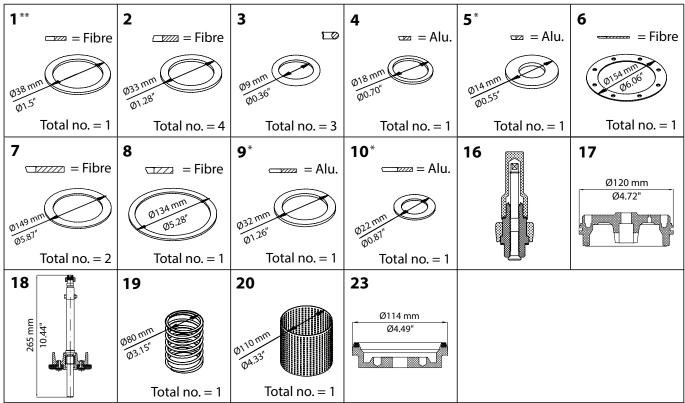


<sup>\*</sup> The spare part is included in the package but is not used for PM size 80 with V-cone. \*\* Included in manual opening device.



#### Overhaul kit | Code number 027F3388 PM, size 100 - V-cone

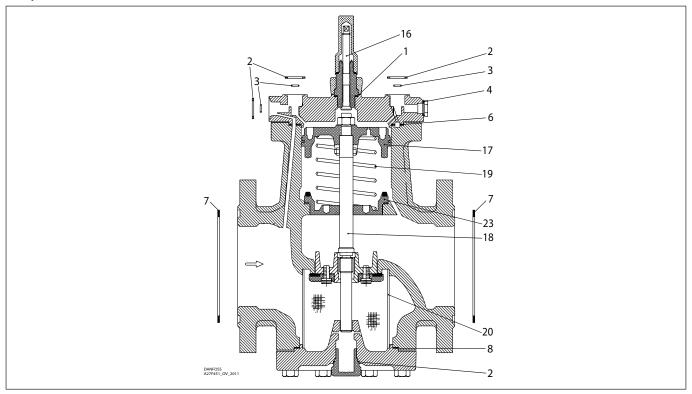


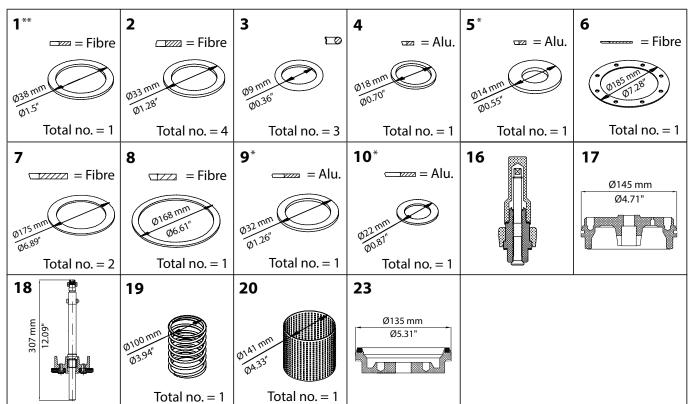


<sup>\*</sup> The spare part is included in the package but is not used for PM size 100 with V-cone. \*\* Included in manual opening device.



#### Overhaul kit | Code number 027F3389 PM, size 125 - V-cone

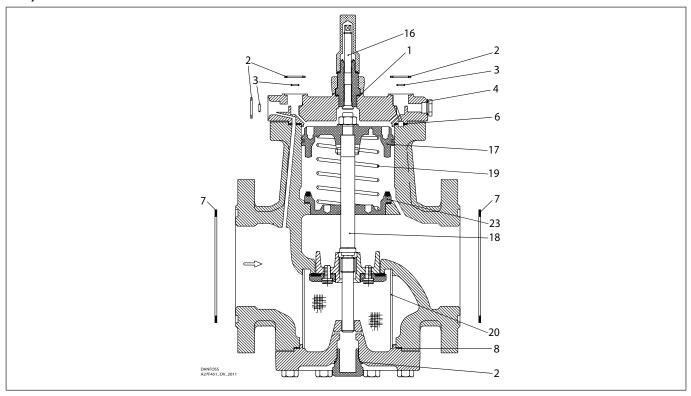


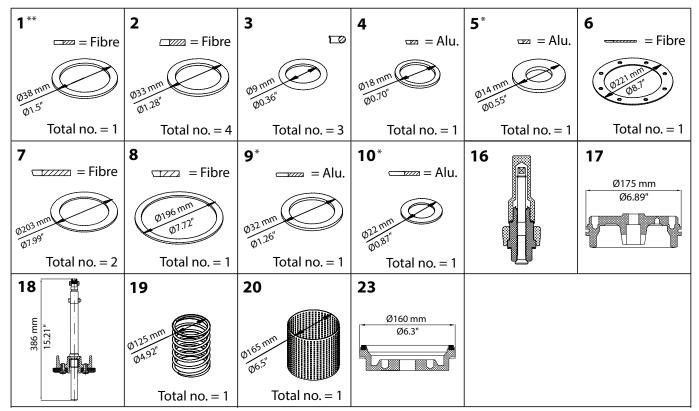


<sup>\*</sup> The spare part is included in the package but is not used for PM size 125 with V-cone. \*\* Included in manual opening device.



# Overhaul kit | Code number 027F0556 PML, size 32

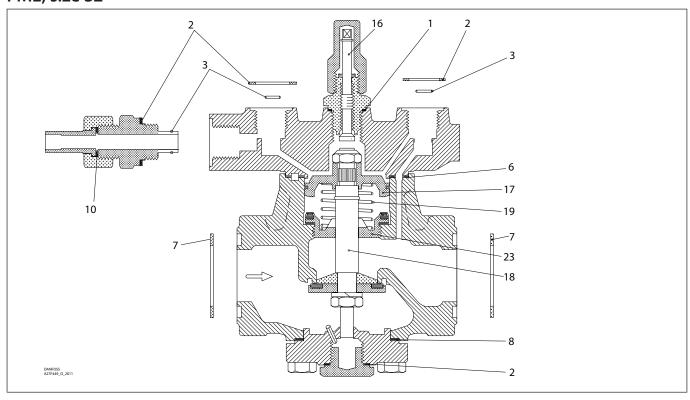


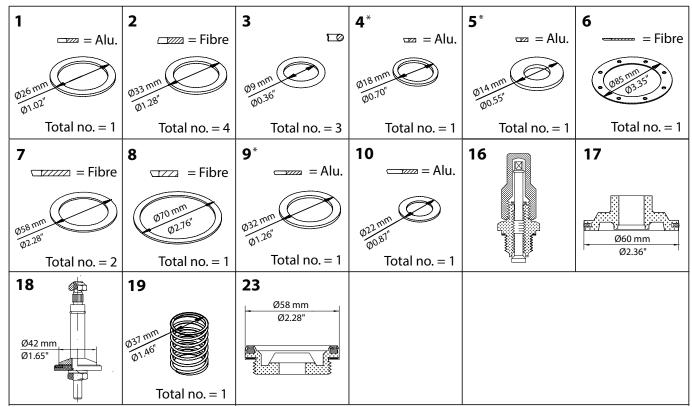


<sup>\*</sup> The spare part is included in the package but is not used for PML size 32.



# Overhaul kit | Code number 027F0557 PML, size 40

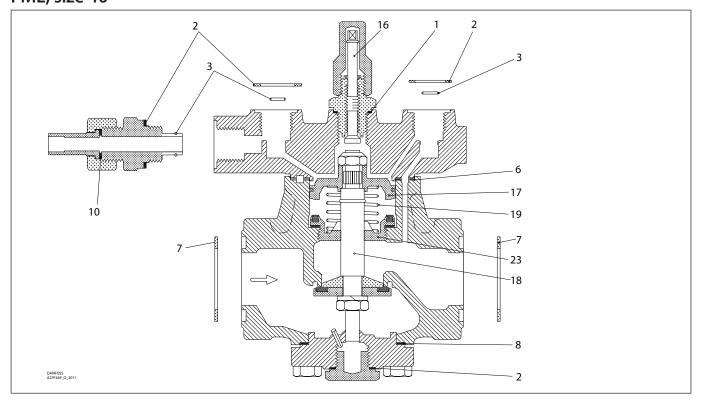


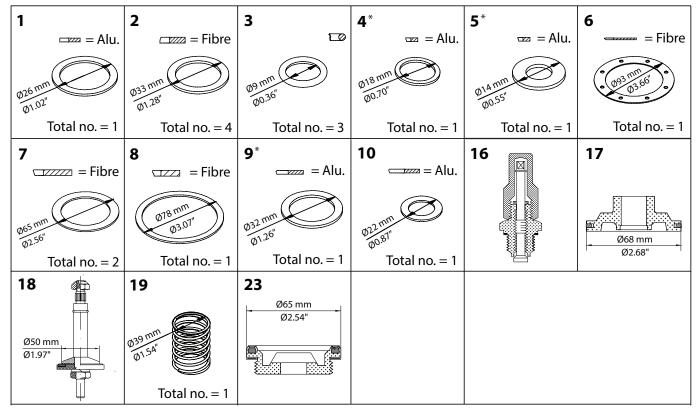


<sup>\*</sup> The spare part is included in the package but is not used for PML size 40.



# Overhaul kit | Code number 027F0558 PML, size 50

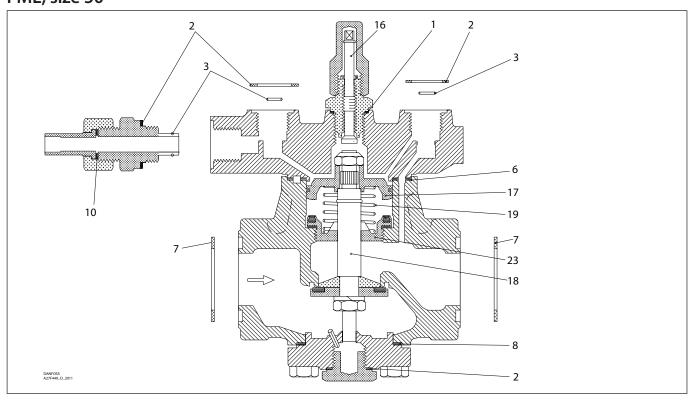


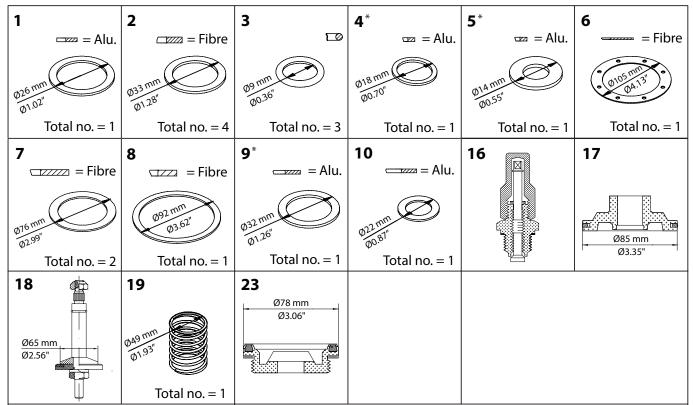


<sup>\*</sup> The spare part is included in the package but is not used for PML size 50.



# Overhaul kit | Code number 027F0559 PML, size 65

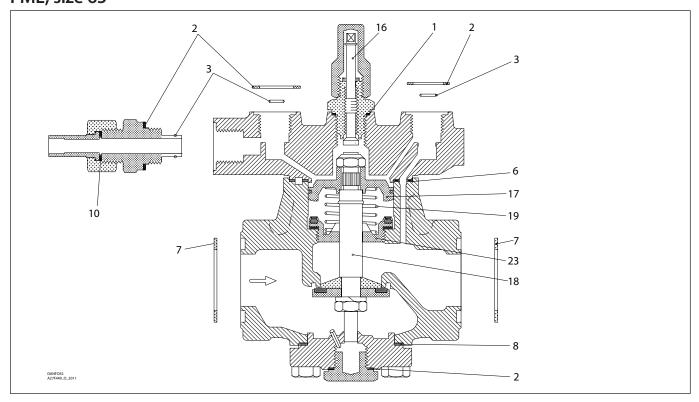


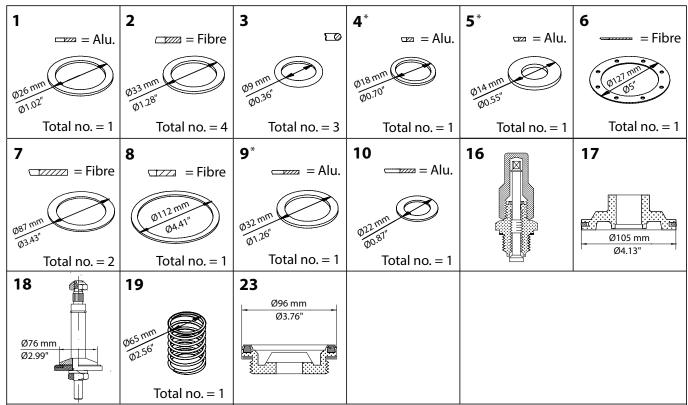


<sup>\*</sup> The spare part is included in the package but is not used for PML size 65.



# Overhaul kit | Code number 027F0560 PML, size 80

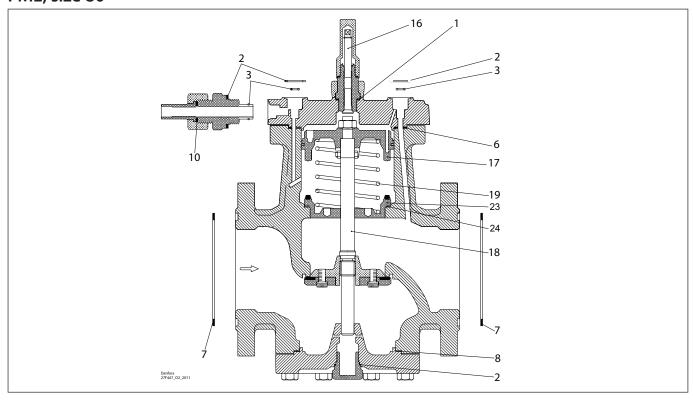


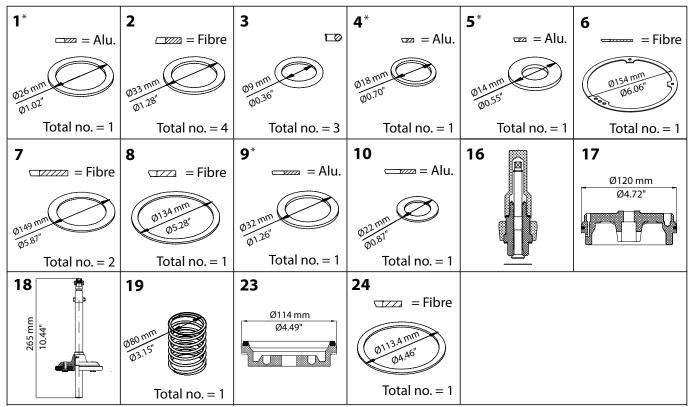


<sup>\*</sup> The spare part is included in the package but is not used for PML size 80.



# Overhaul kit | Code number 027F0561 PML, size 100

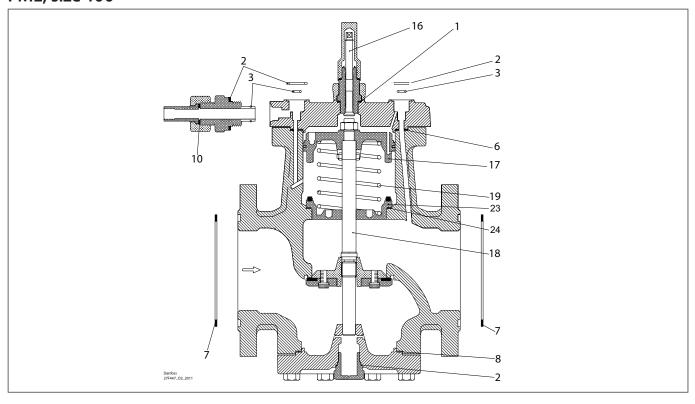


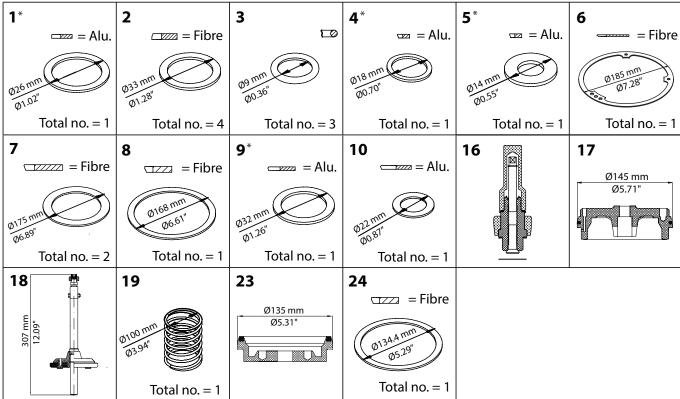


<sup>\*</sup> The spare part is included in the package but is not used for PML size 100.



#### Overhaul kit | Code number 027F0562 PML, size 125

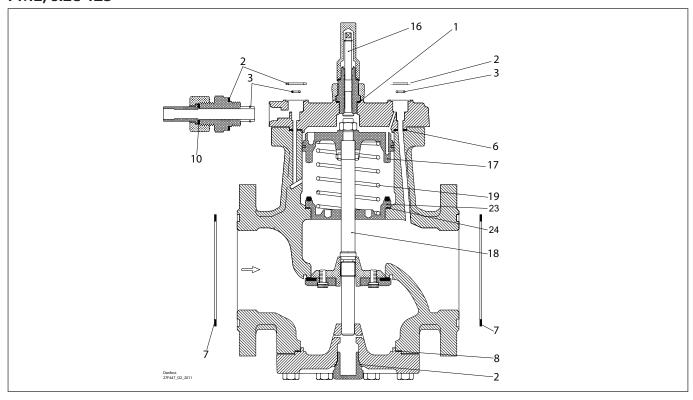


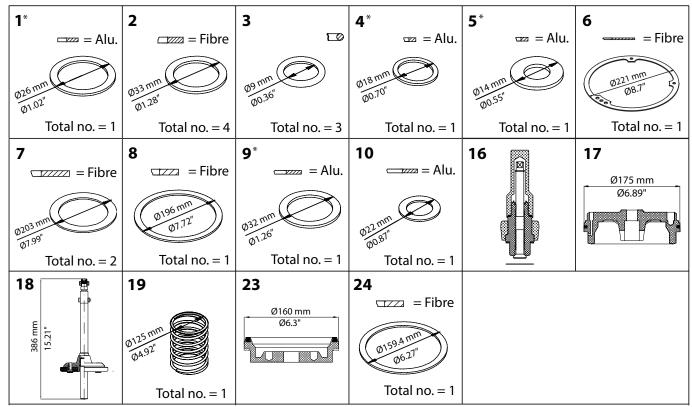


<sup>\*</sup> The spare part is included in the package but is not used for PML size 125.



# Overhaul kit | Code number 027F0563 PMLX, size 32

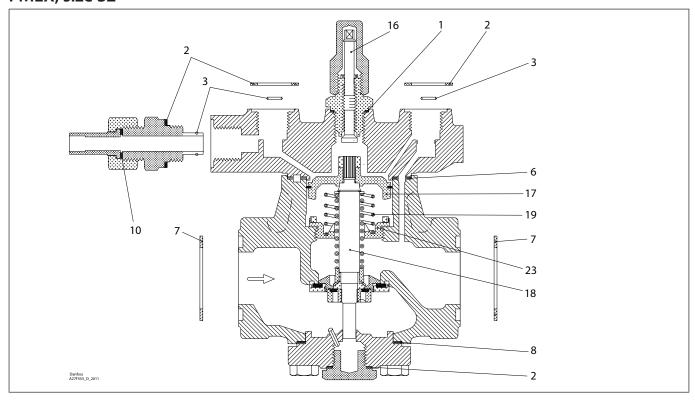


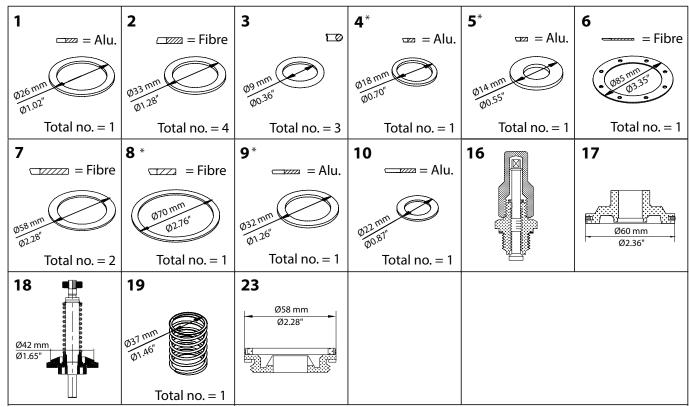


<sup>\*</sup> The spare part is included in the package but is not used for PMLX size 32.



# Overhaul kit | Code number 027F0568 PMLX, size 40

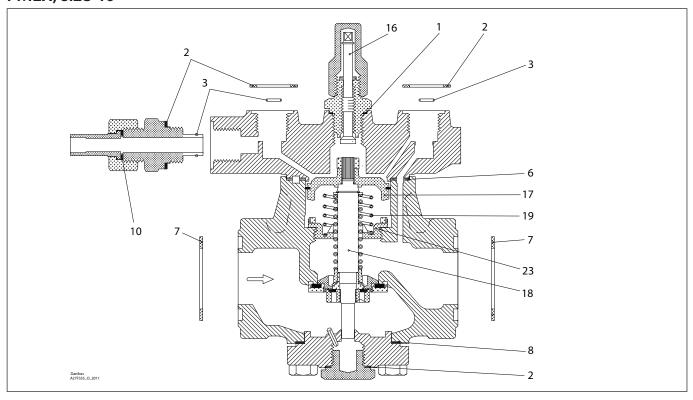


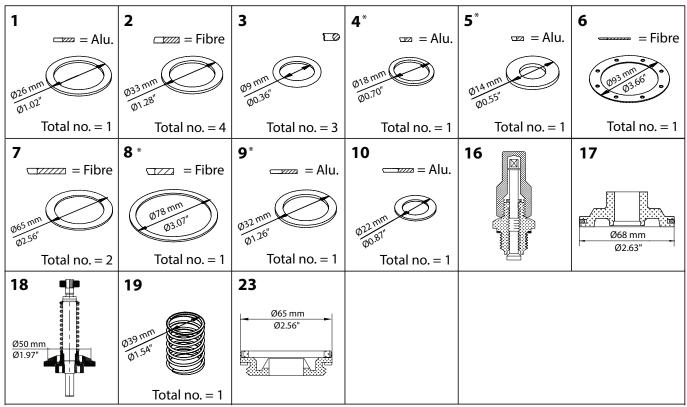


<sup>\*</sup> The spare part is included in the package but is not used for PMLX size 40.



#### Overhaul kit | Code number 027F0569 PMLX, size 50

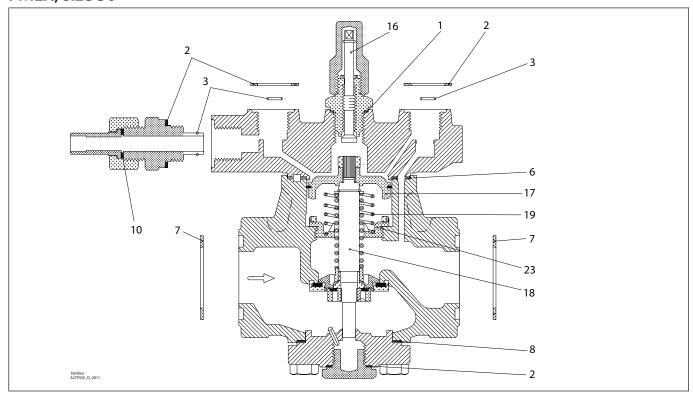


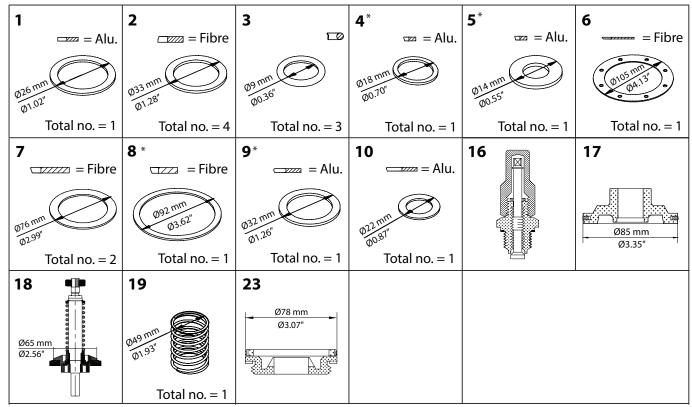


 $<sup>\</sup>ensuremath{^{*}}$  The spare part is included in the package but is not used for PMLX size 50.



# Overhaul kit | Code number 027F0570 PMLX, size 65

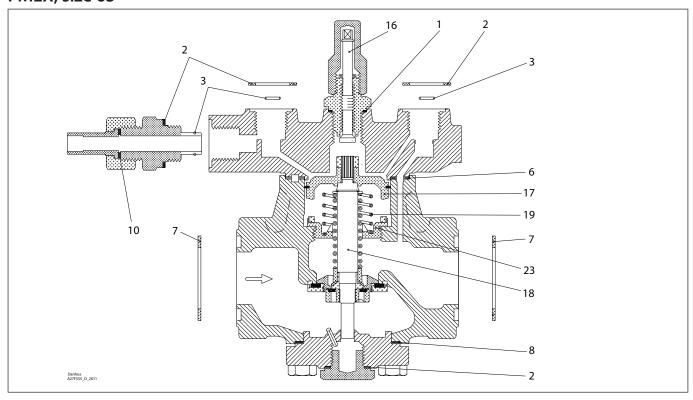


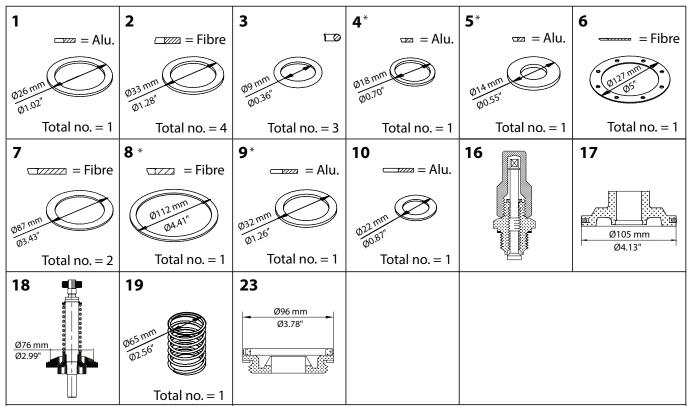


<sup>\*</sup> The spare part is included in the package but is not used for PMLX size 65.



# Overhaul kit | Code number 027F0571 PMLX, size 80

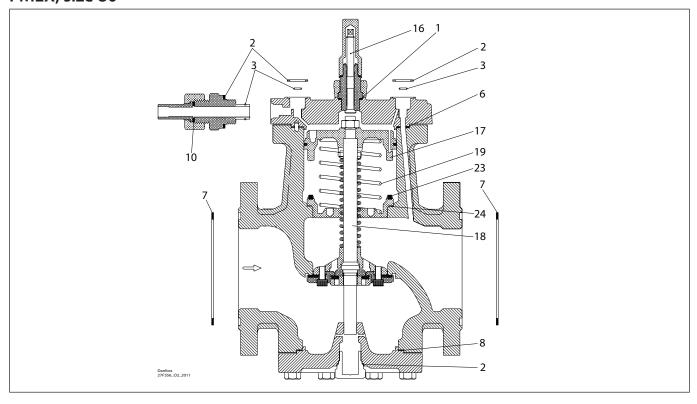


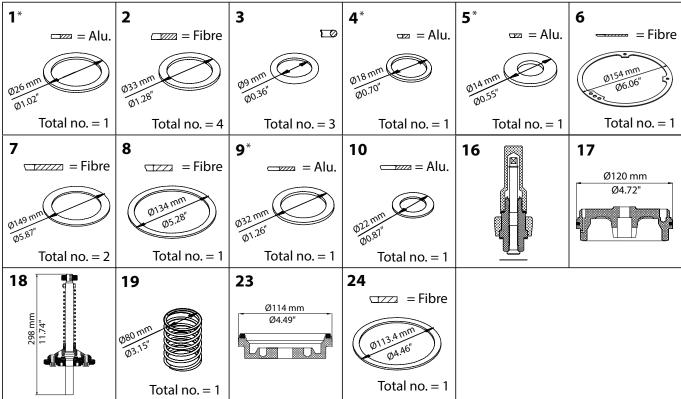


<sup>\*</sup> The spare part is included in the package but is not used for PMLX size 80.



# Overhaul kit | Code number 027F0572 PMLX, size 100

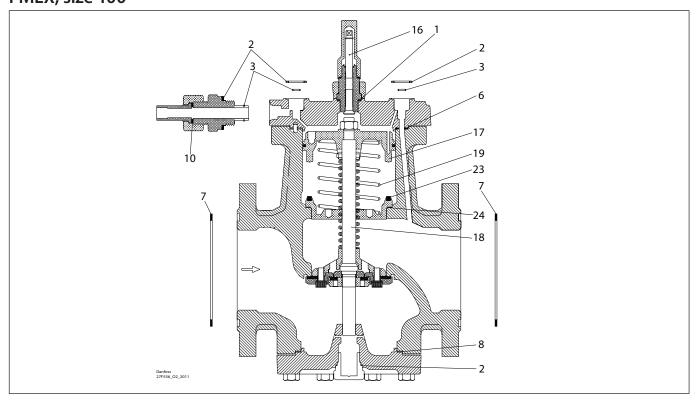


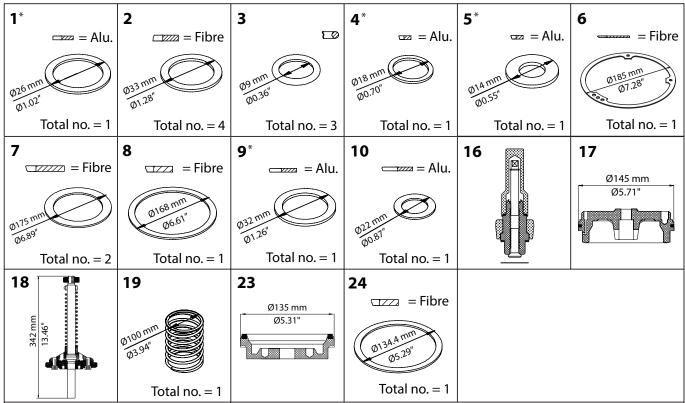


<sup>\*</sup> The spare part is included in the package but is not used for PMLX size 100.



# Overhaul kit | Code number 027F0573 PMLX, size 125

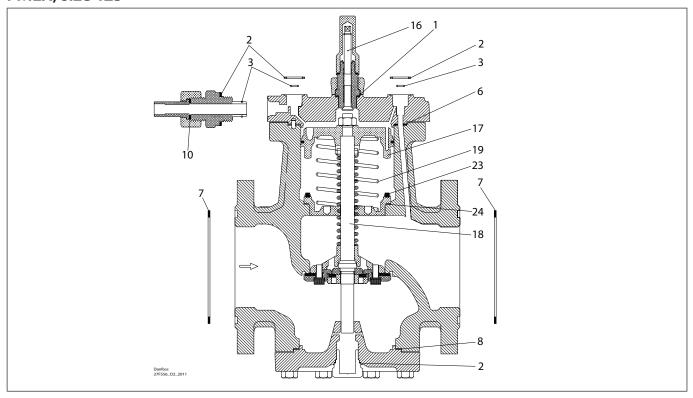


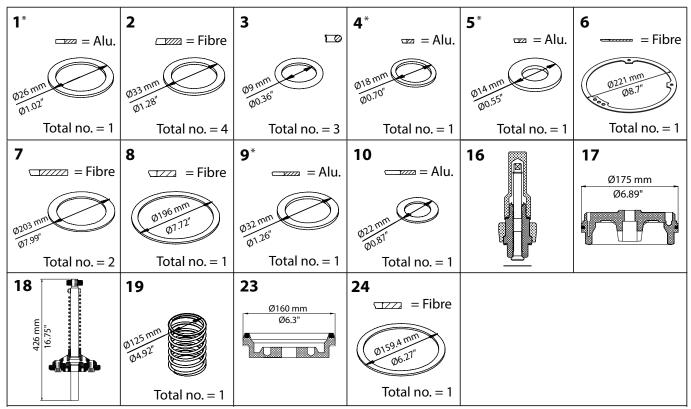


<sup>\*</sup> The spare part is included in the package but is not used for PMLX size 125.



#### Overhaul kit | Code number 027F0577 MRV, size 5

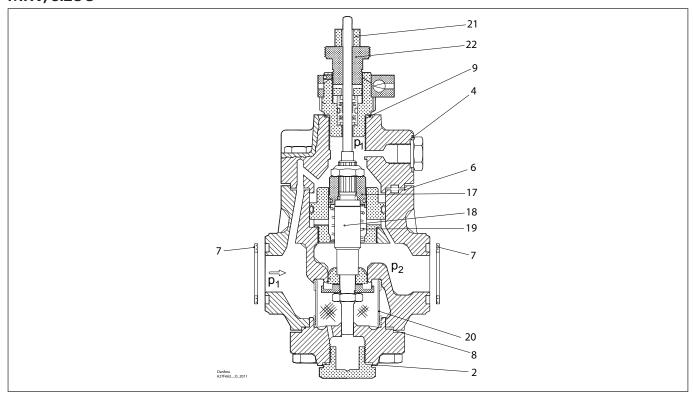


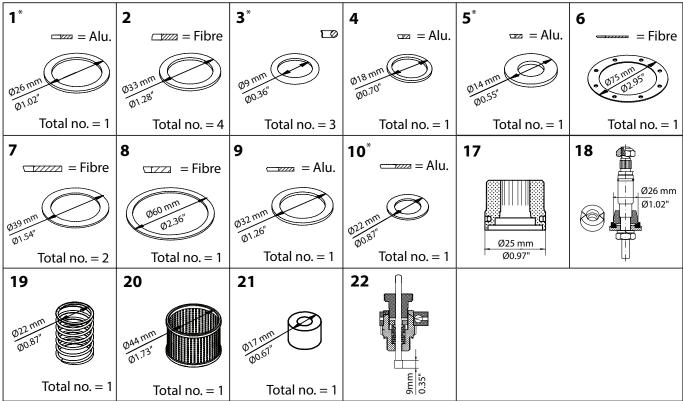


<sup>\*</sup>The spare part is included in the package but is not used for MRV 5.



# Overhaul kit | Code number 027F0578 MRV, size 10

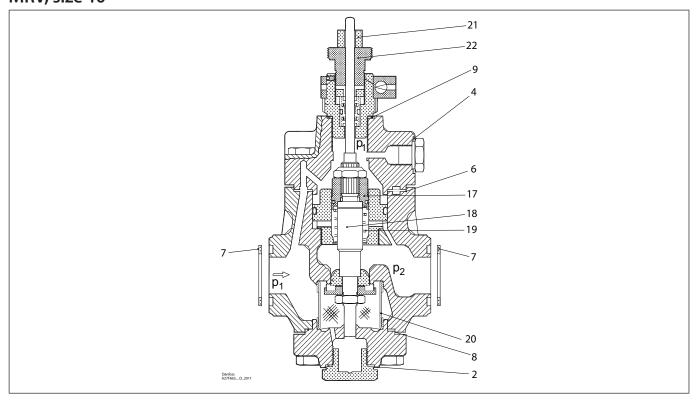


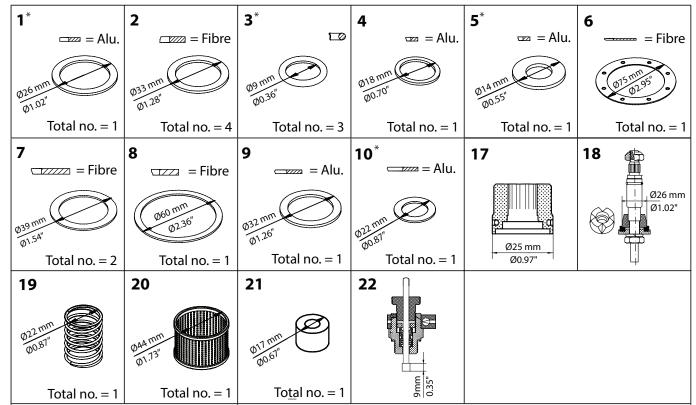


<sup>\*</sup>The spare part is included in the package but is not used for MRV 10.



#### Overhaul kit | Code number 027F0579 MRV, size 15

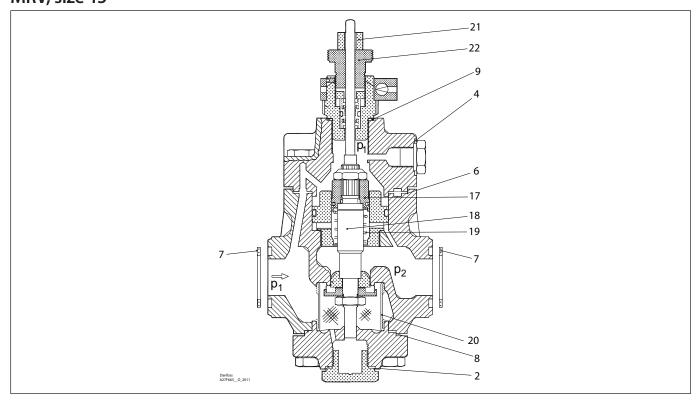


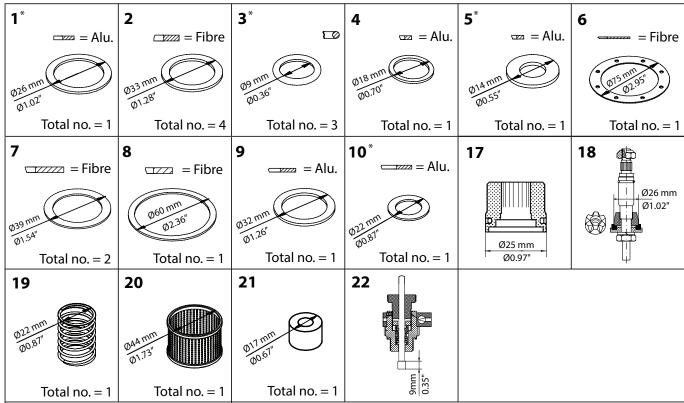


<sup>\*</sup>The spare part is included in the package but is not used for MRV 15.



# Overhaul kit | Code number 027F0580 MRV, size 20

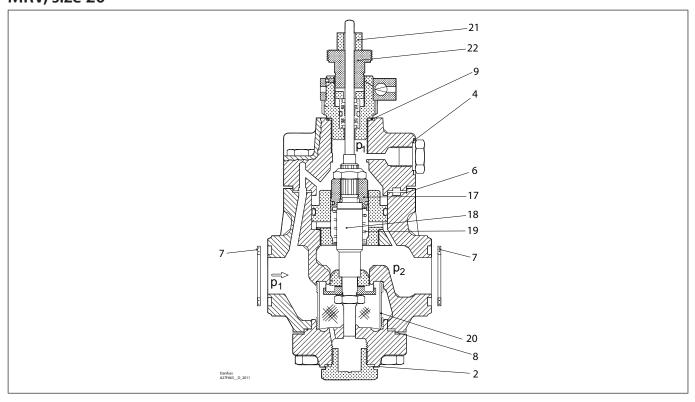


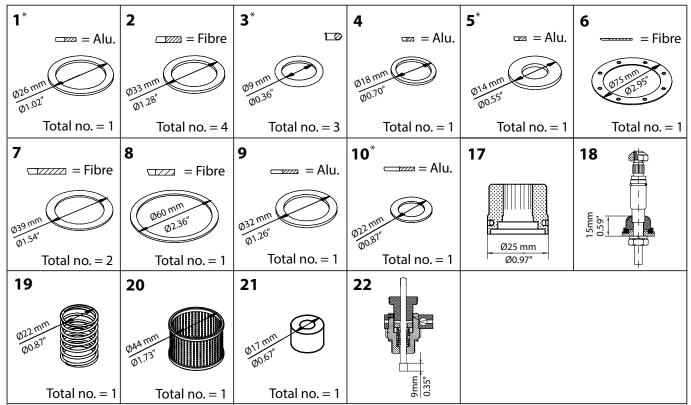


<sup>\*</sup>The spare part is included in the package but is not used for MRV 20.



#### Overhaul kit | Code number 027F0581 MRV, size 25

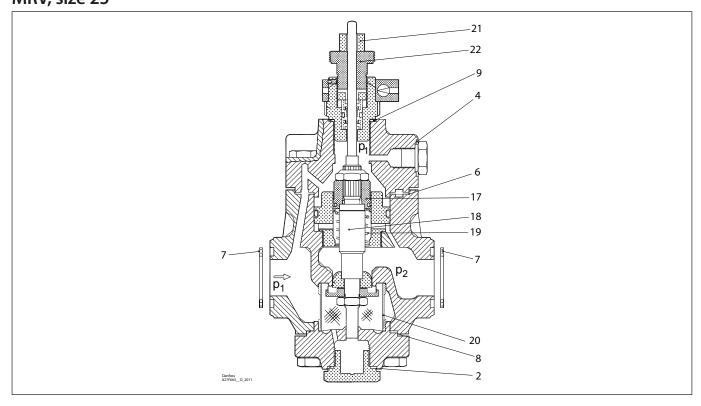


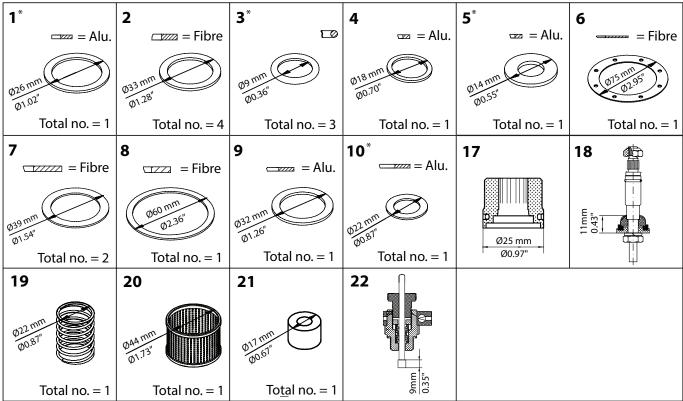


<sup>\*</sup>The spare part is included in the package but is not used for MRV 25.



# Overhaul kit | Code number 027F0582 MRV, size 32

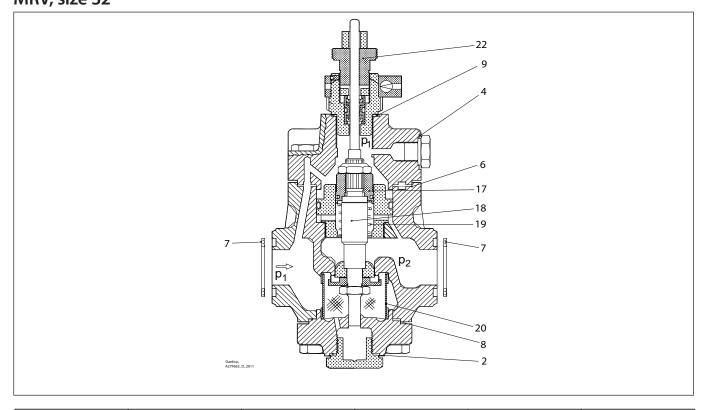


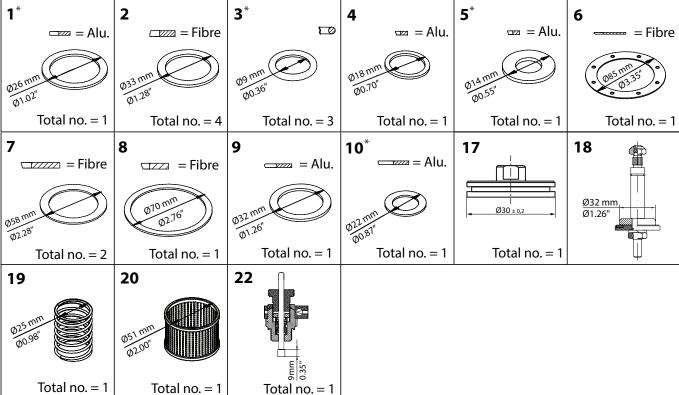


<sup>\*</sup>The spare part is included in the package but is not used for MRV 32.



# Overhaul kit | Code number 027F0583 MRV, size 40

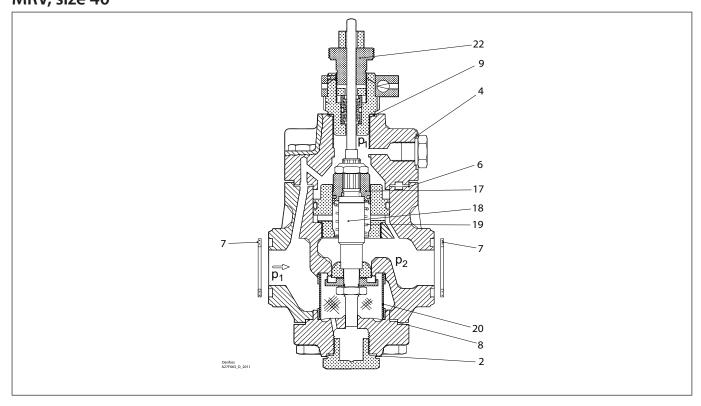


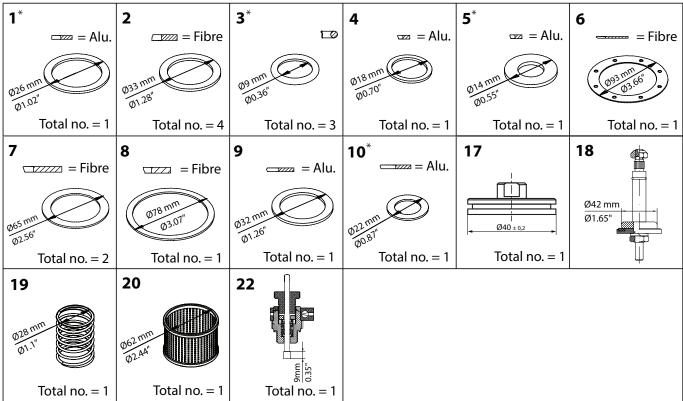


<sup>\*</sup>The spare part is included in the package but is not used for MRV 40.



# Overhaul kit | Code number 027F0584 MRV, size 50

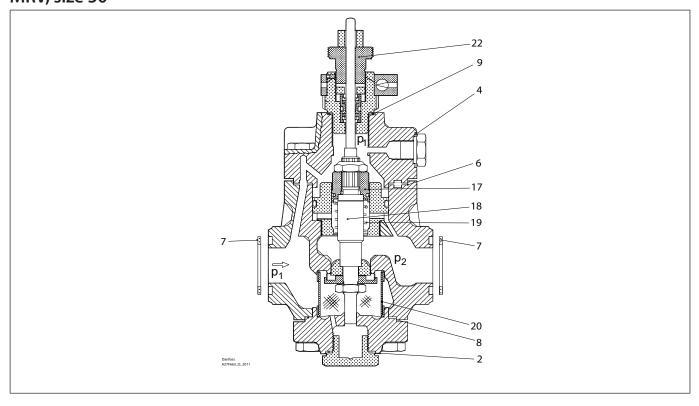


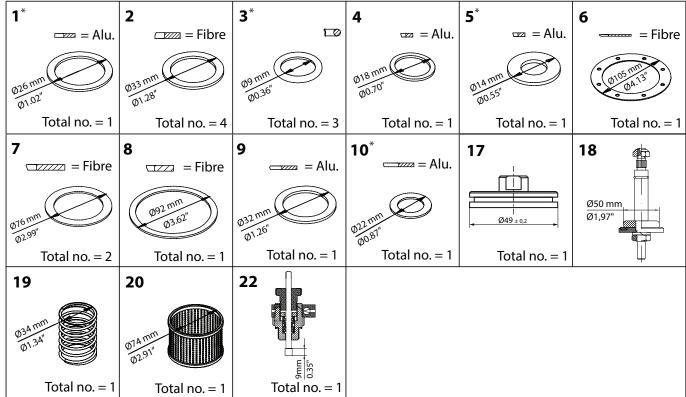


<sup>\*</sup>The spare part is included in the package but is not used for MRV 50.



# Overhaul kit | Code number 027F0592 MRV, size 65

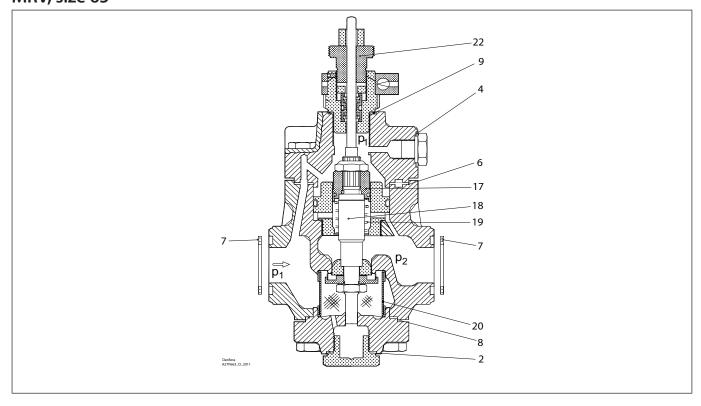


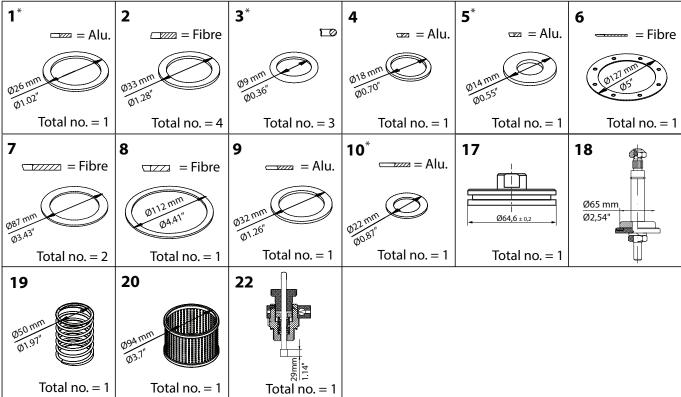


<sup>\*</sup>The spare part is included in the package but is not used for MRV 65.



# Overhaul kit | Code number 027F0611 PMFL, size 80-1

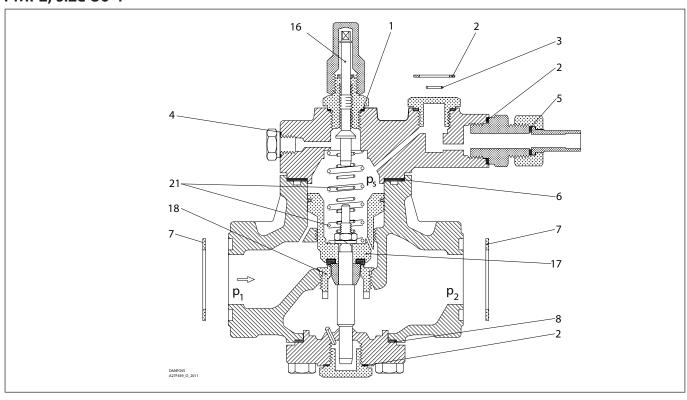

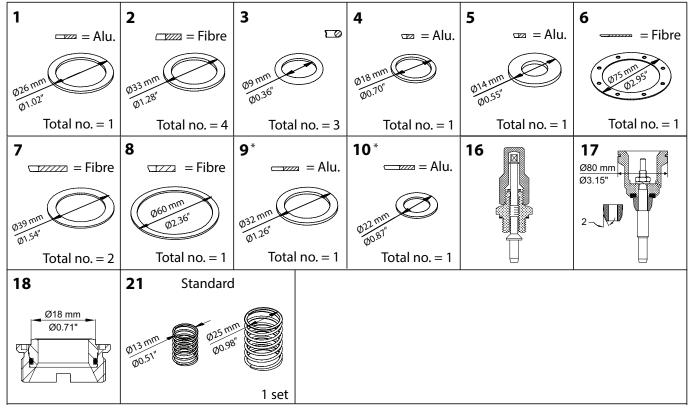



 $<sup>\</sup>ensuremath{^{*}}$  The spare part is included in the package but is not used for PMFL size 80-1.

 $For identification \ and \ installation \ of \ Weak \ and \ Strong \ spring \ sets \ please \ see \ Installation \ guide \ DKRCI.PI.GE1.C$ 



# Overhaul kit | Code number 027F0631 PMFL, size 80-2

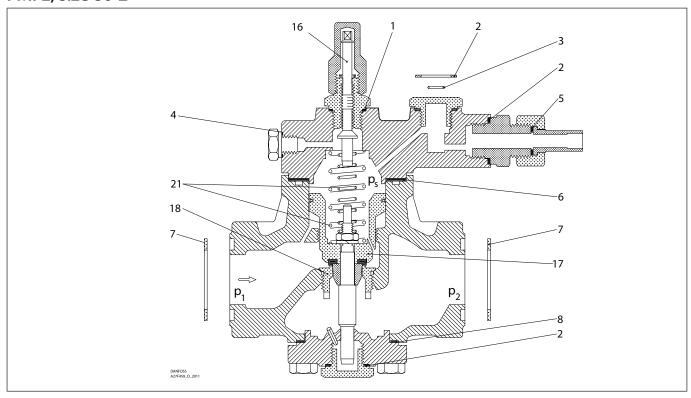


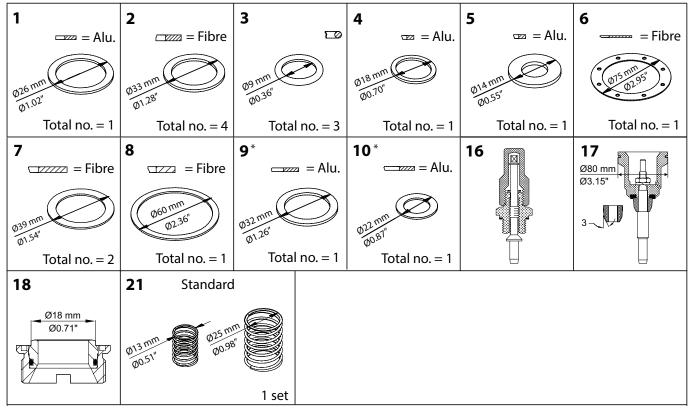


<sup>\*</sup> The spare part is included in the package but is not used for PMFL size 80-2.



# Overhaul kit | Code number 027F0632 PMFL, size 80-3

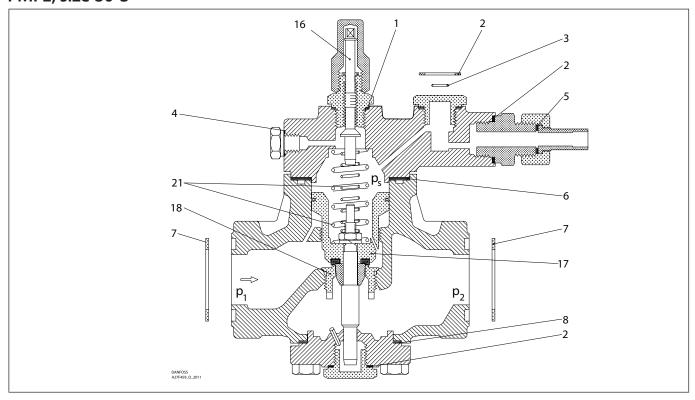


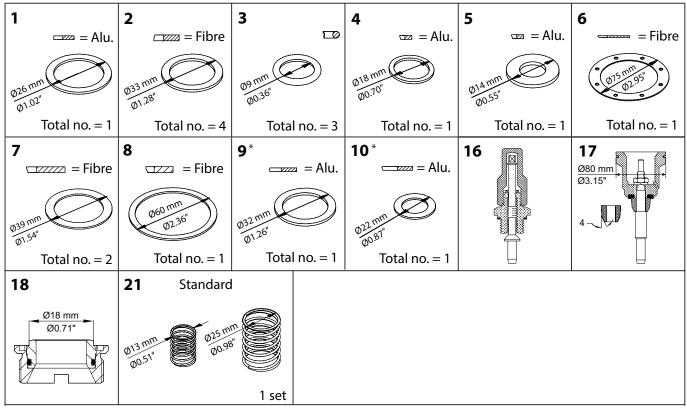


 $<sup>\</sup>ensuremath{^{*}}$  The spare part is included in the package but is not used for PMFL size 80-3.



# Overhaul kit | Code number 027F0633 PMFL, size 80-4

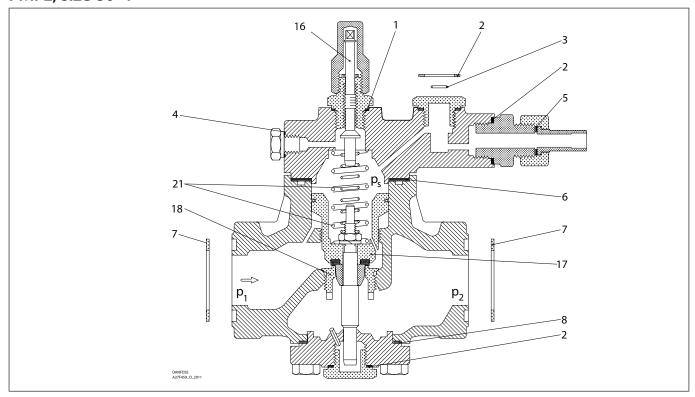


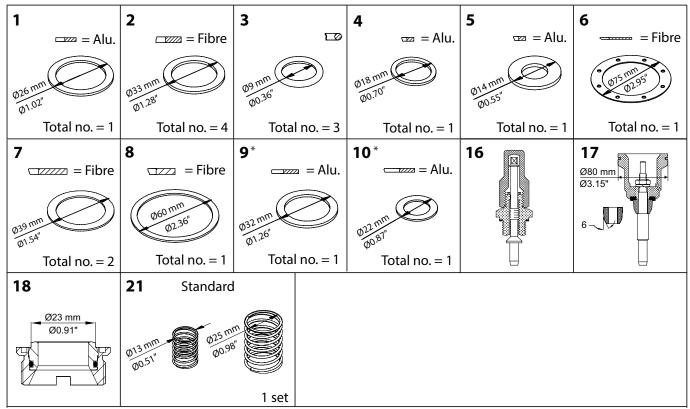


<sup>\*</sup> The spare part is included in the package but is not used for PMFL size 80-4.



### Overhaul kit | Code number 027F0634 PMFL, size 80-5

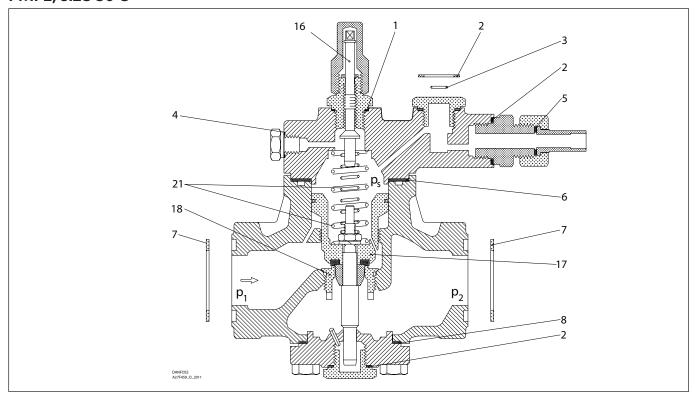

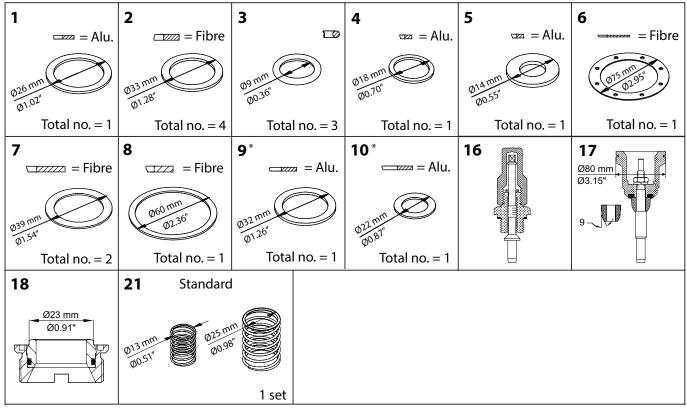



 $<sup>\</sup>mbox{\ensuremath{^{\ast}}}$  The spare part is included in the package but is not used for PMFL size 80-5.

 $For identification \ and \ installation \ of \ Weak \ and \ Strong \ spring \ sets \ please \ see \ Installation \ guide \ DKRCI.PI.GE1.C$ 



# Overhaul kit | Code number 027F0635 PMFL, size 80-6

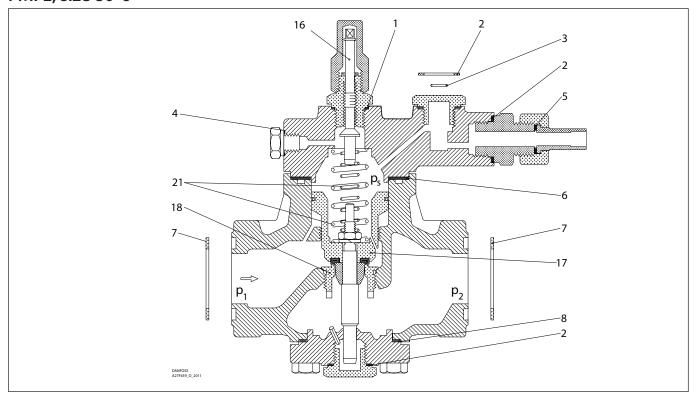


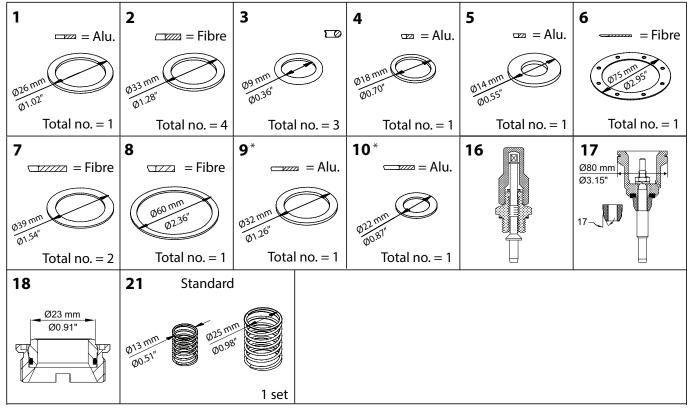


<sup>\*</sup>The spare part is included in the package but is not used for PMFL size 80-6.



### Overhaul kit | Code number 027F0636 PMFL, size 80-7

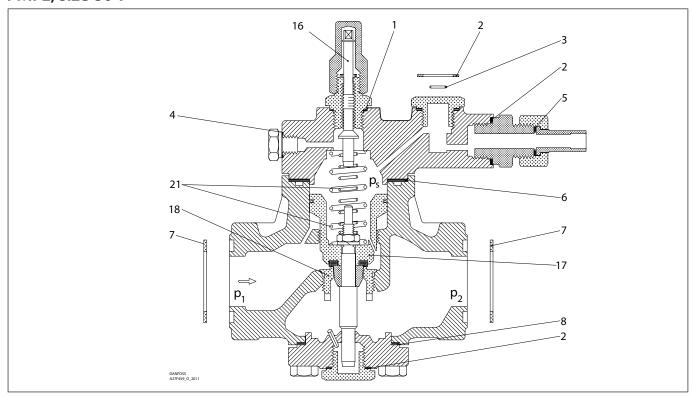


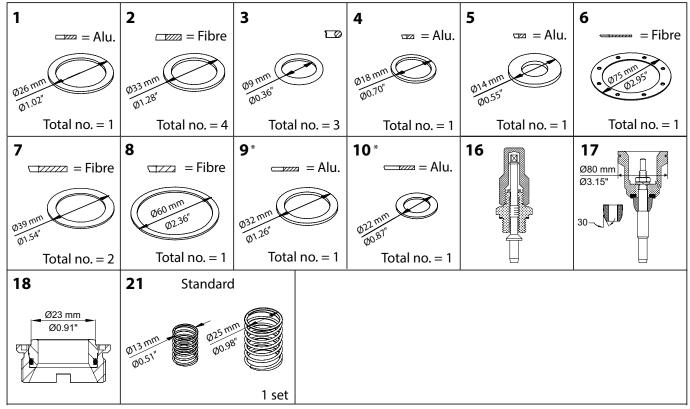


<sup>\*</sup> The spare part is included in the package but is not used for PMFL size 80-7.



# Overhaul kit | Code number 027F0637 PMFL, size 125

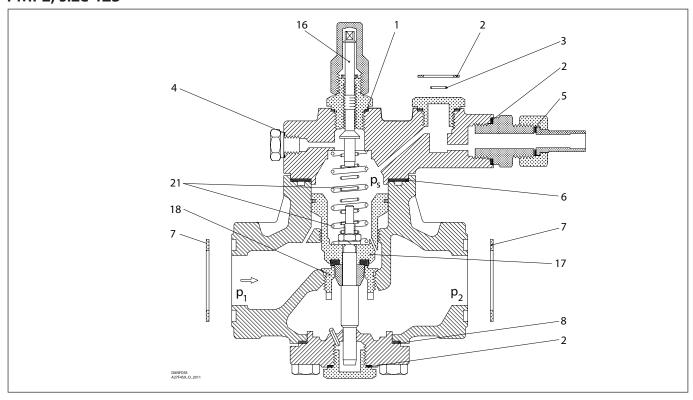


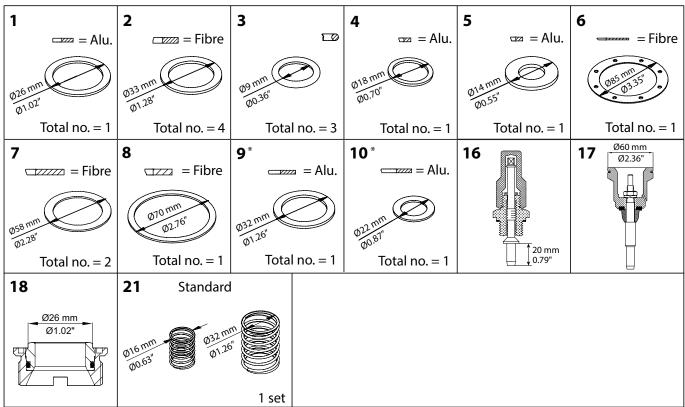


 $<sup>\</sup>ensuremath{^{*}}$  The spare part is included in the package but is not used for PMFL size 125.



# Overhaul kit | Code number 027F0638 PMFL, size 200

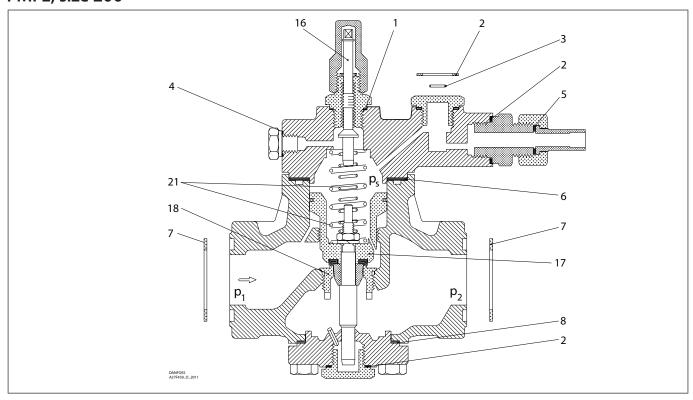


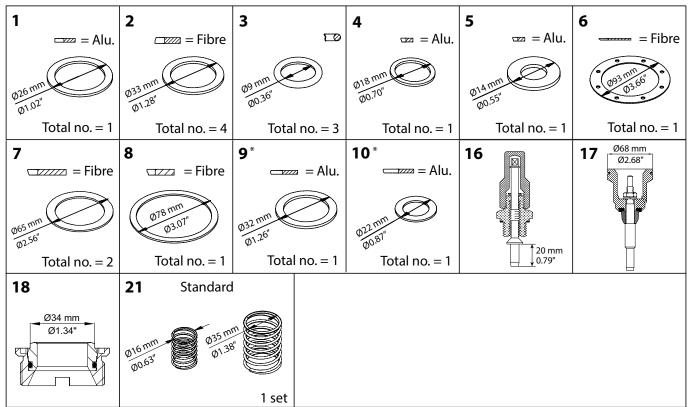


 $<sup>\</sup>mbox{\ensuremath{^{+}}}$  The spare part is included in the package but is not used for PMFL size 200.



# Overhaul kit | Code number 027F0639 PMFL, size 300

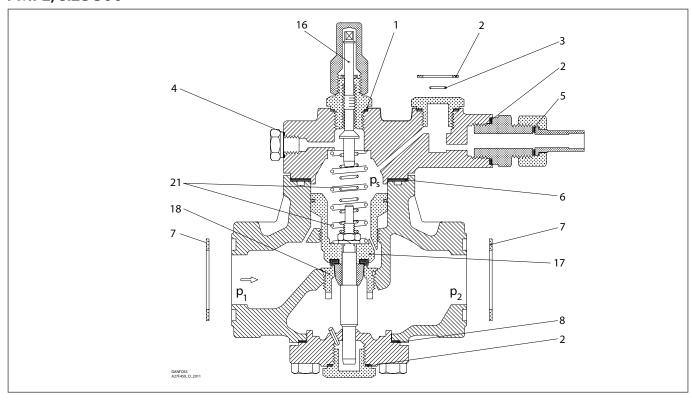


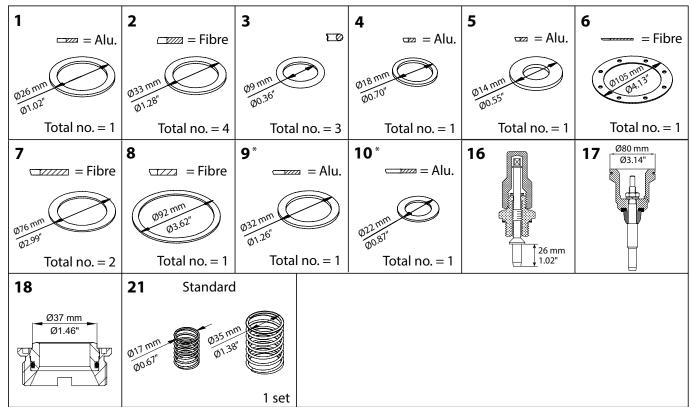


 $<sup>\</sup>mbox{\ensuremath{^{+}}}$  The spare part is included in the package but is not used for PMFL size 300.



# Overhaul kit | Code number 027F0663 PMFH, size 80-2

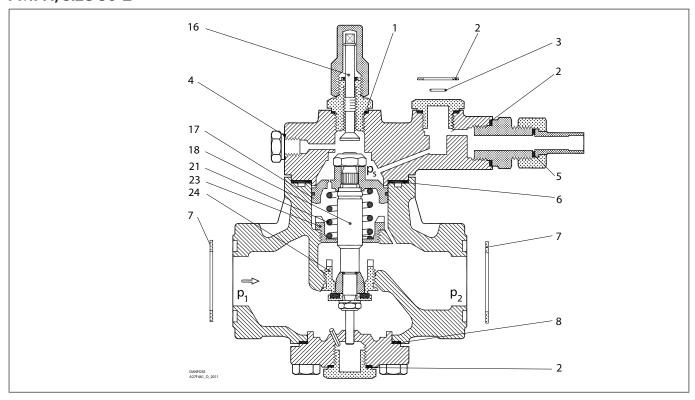


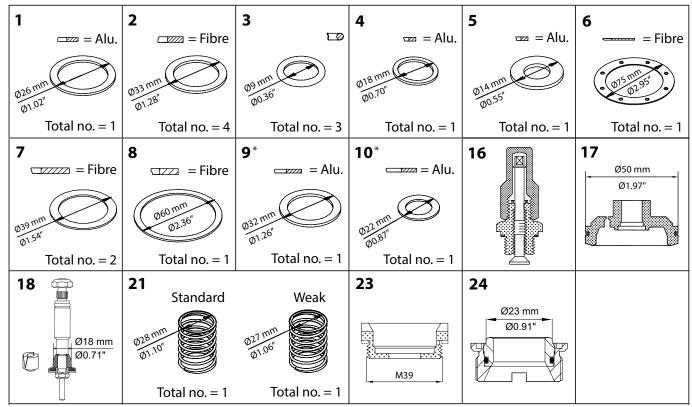


<sup>\*</sup> The spare part is included in the package but is not used for PMFH size 80-2.



# Overhaul kit | Code number 027F0669 PMFH, size 80-3

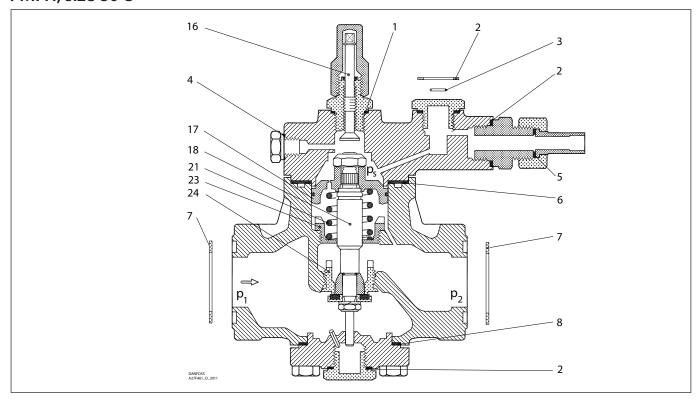


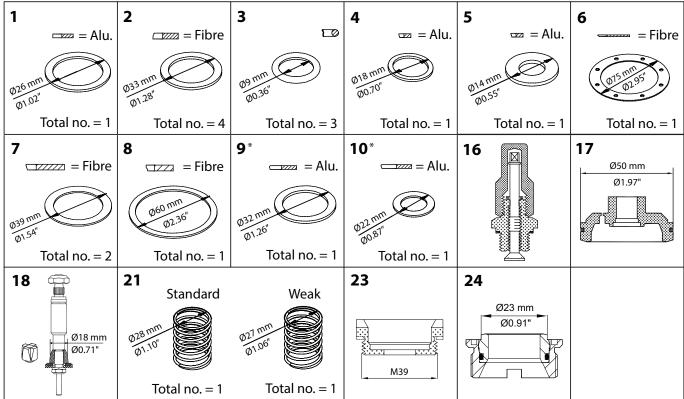


<sup>\*</sup> The spare part is included in the package but is not used for PMFH size 80-3.



# Overhaul kit | Code number 027F0676 PMFH, size 80-4

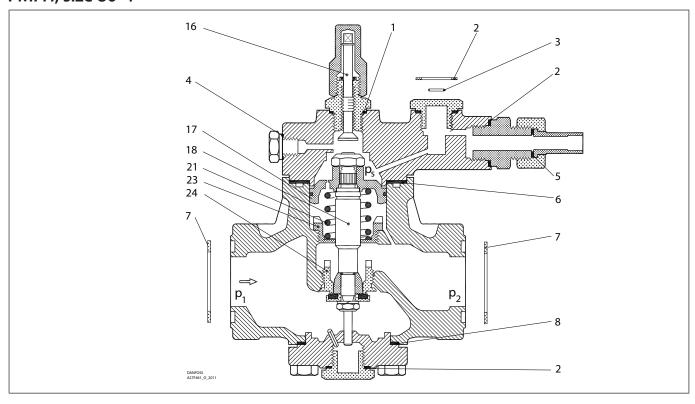


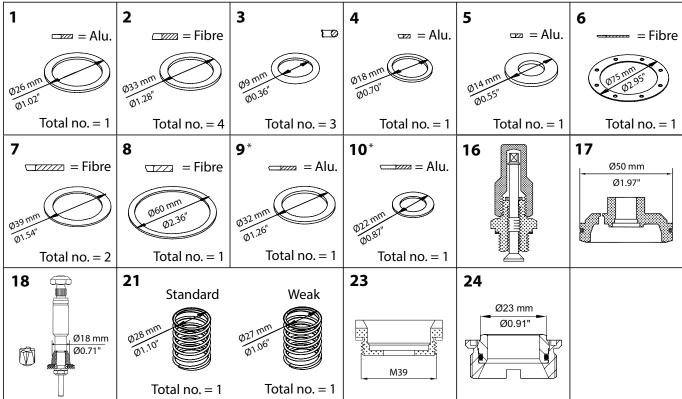


<sup>\*</sup> The spare part is included in the package but is not used for PMFH size 80-4.



# Overhaul kit | Code number 027F0677 PMFH, size 80-5

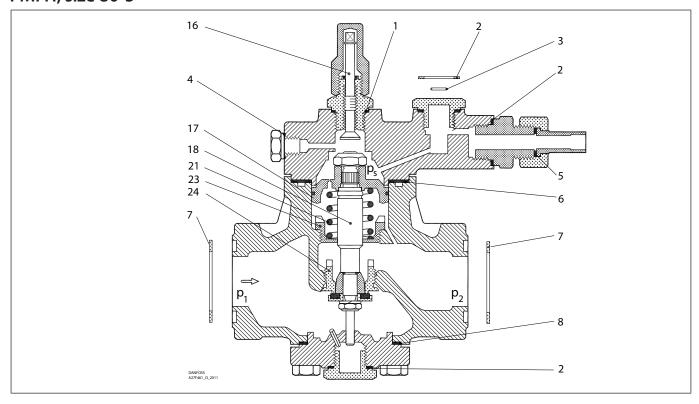


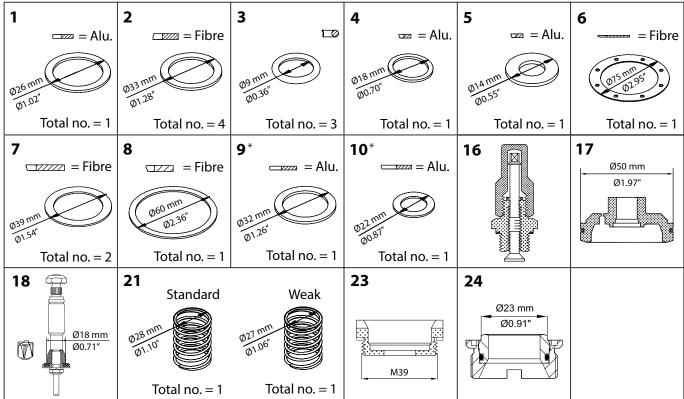


<sup>\*</sup> The spare part is included in the package but is not used for PMFH size 80-5.



# Overhaul kit | Code number 027F0678 PMFH, size 80-6

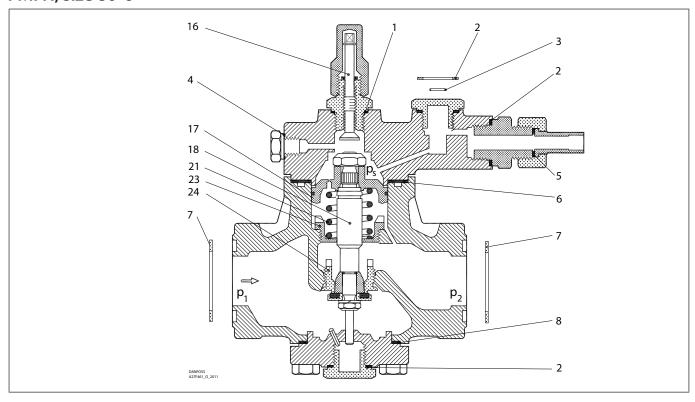


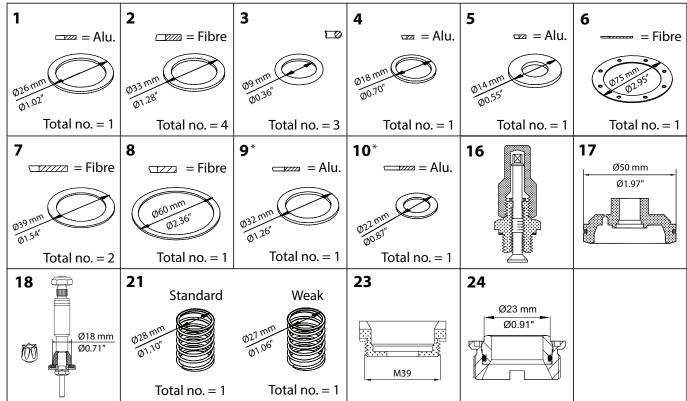


 $<sup>\</sup>mbox{\ensuremath{^{*}}}$  The spare part is included in the package but is not used for PMFH size 80-6.



# Overhaul kit | Code number 027F0700 PMFH, size 80-7

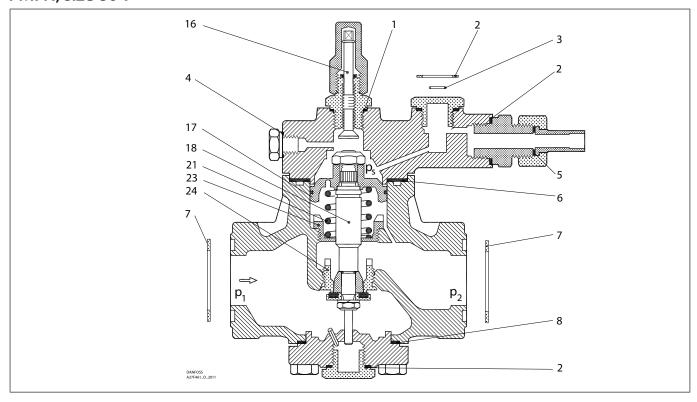


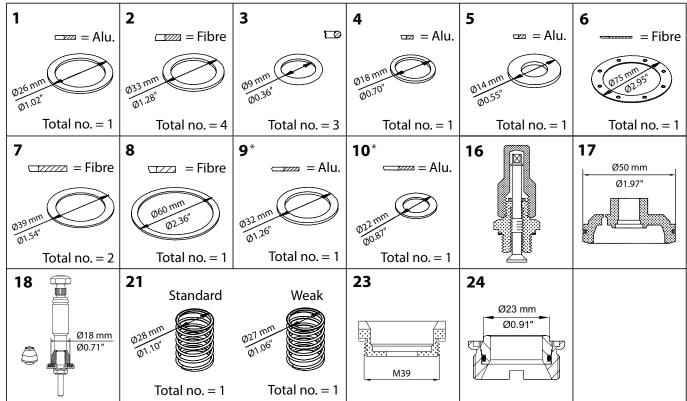


 $<sup>\</sup>ensuremath{^{*}}$  The spare part is included in the package but is not used for PMFH size 80-7.



# Overhaul kit | Code number 027F0704 PMFH, size 125

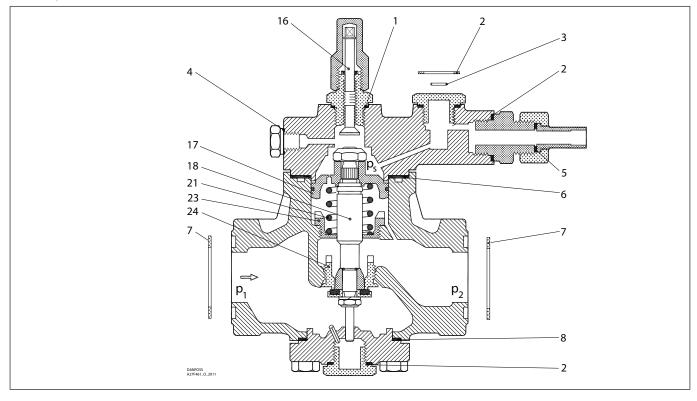


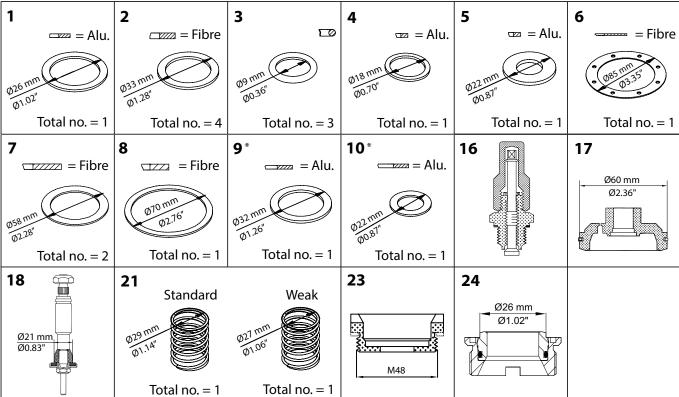


<sup>\*</sup> The spare part is included in the package but is not used for PMFH size 125.



#### Overhaul kit | Code number 027F0705 PMFH, size 200

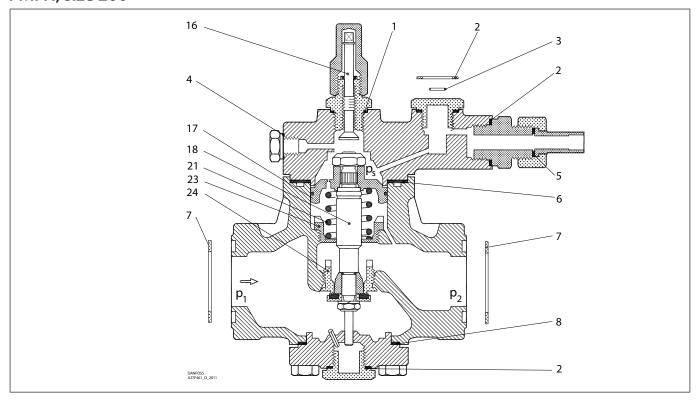


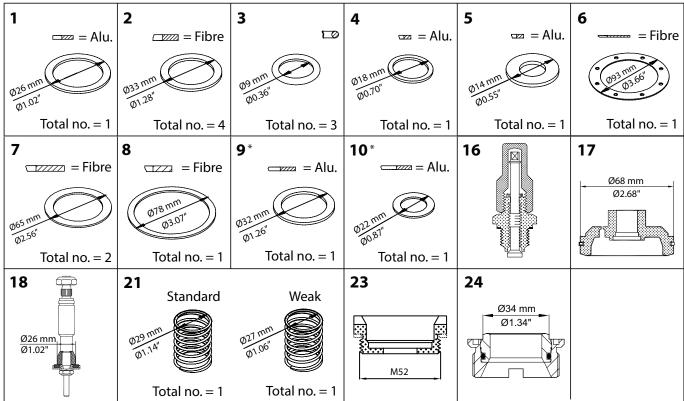


<sup>\*</sup> The spare part is included in the package but is not used for PMFH size 200.



# Overhaul kit | Code number 027F0709 PMFH, size 300

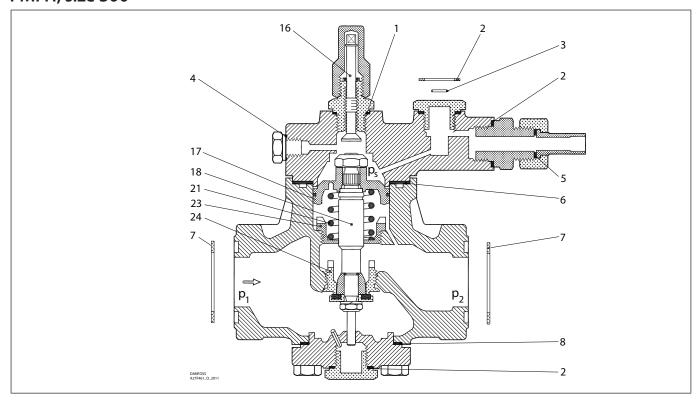


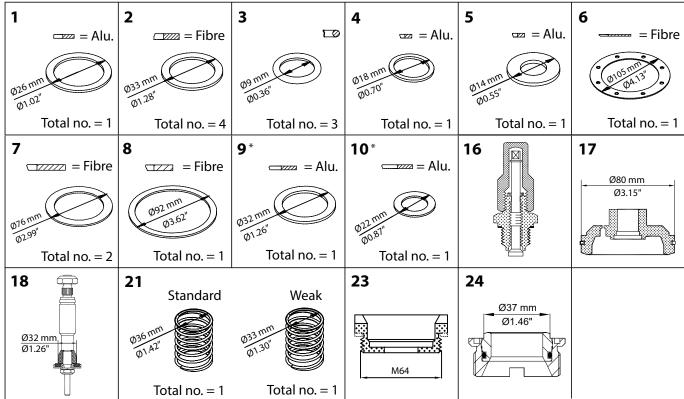


<sup>\*</sup> The spare part is included in the package but is not used for PMFH size 300.



# Overhaul kit | Code number 027F0710 PMFH, size 500

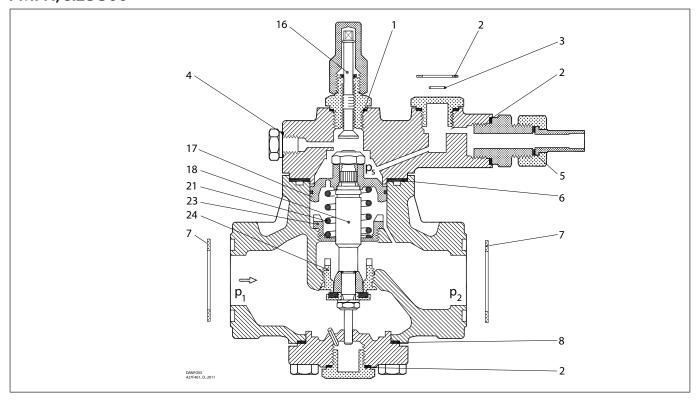


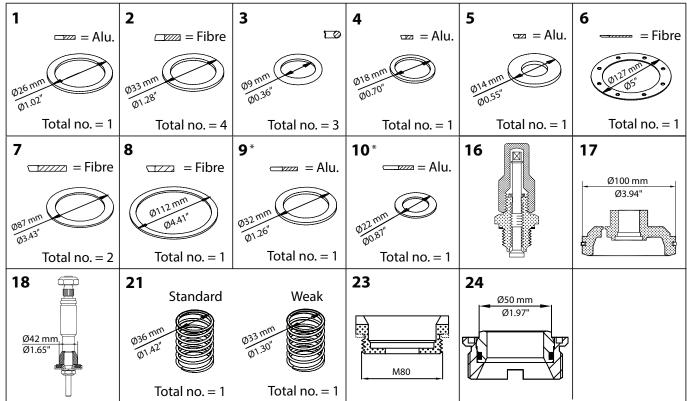


 $<sup>\</sup>mbox{\ensuremath{^{*}}}$  The spare part is included in the package but is not used for PMFH size 500.



# Overhaul kit | Code number 027F0760 MEV, size 80-2

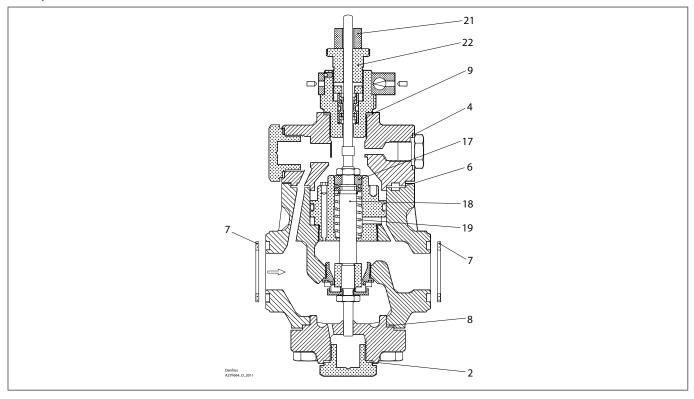


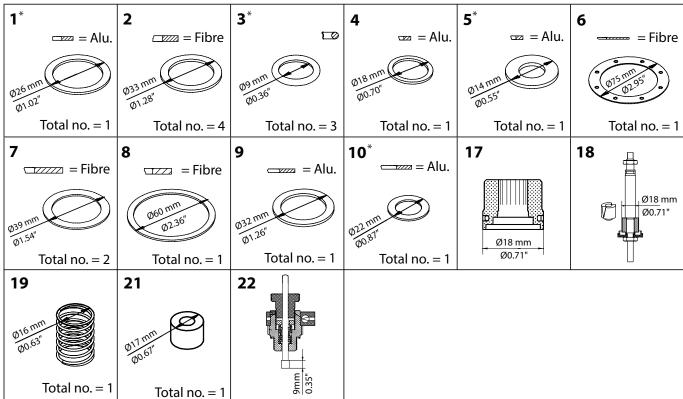


<sup>\*</sup>The spare part is included in the package but is not used for MEV 80-2.



# Overhaul kit | Code number 027F0762 MEV, size 80-4

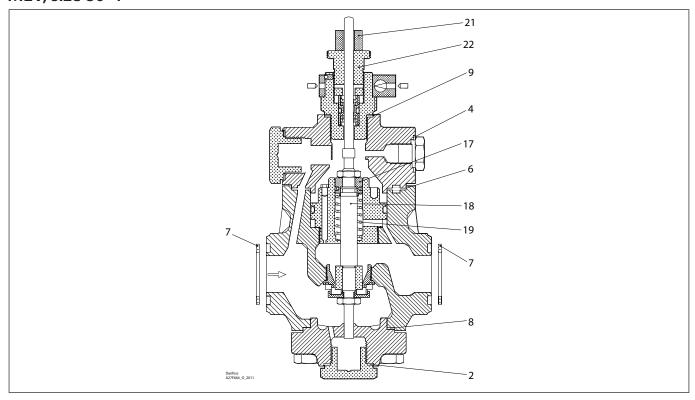


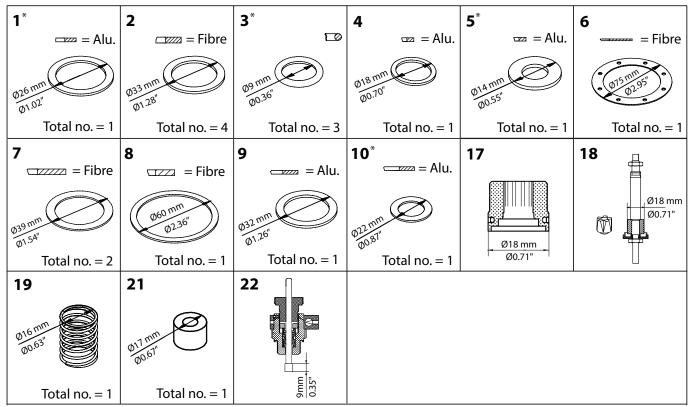


<sup>\*</sup>The spare part is included in the package but is not used for MEV 80-4.



# Overhaul kit | Code number 027F0763 MEV, size 80-5

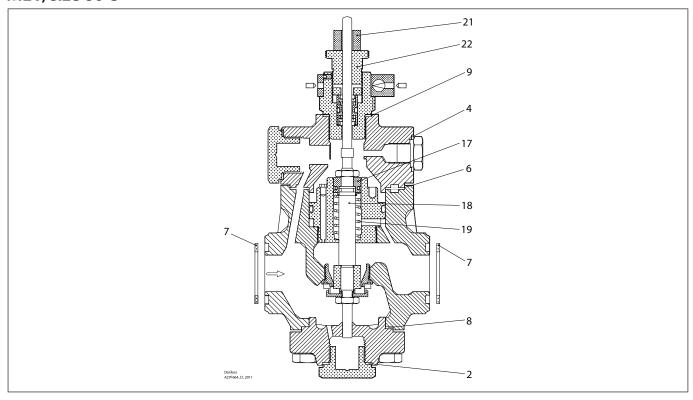


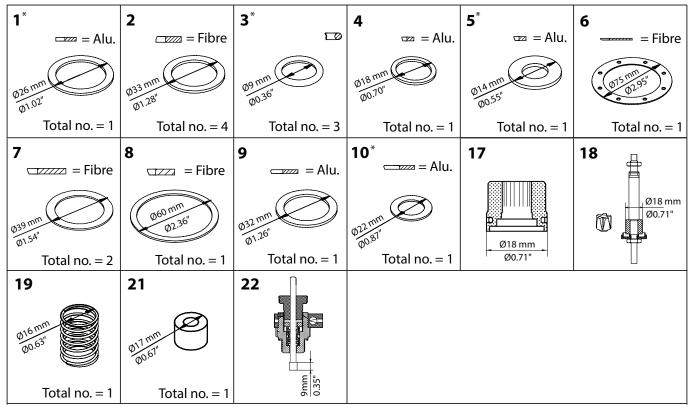


<sup>\*</sup>The spare part is included in the package but is not used for MEV 80-5.



# Overhaul kit | Code number 027F0764 MEV, size 80-6

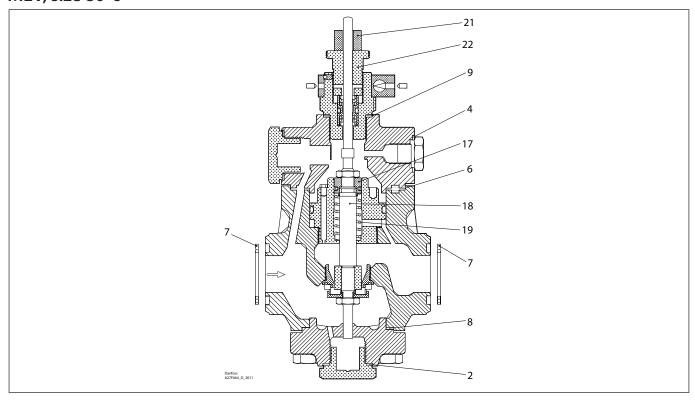


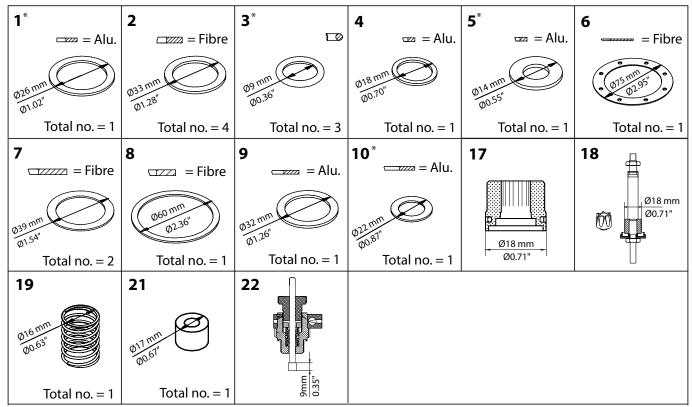


<sup>\*</sup>The spare part is included in the package but is not used for MEV 80-6.



# Overhaul kit | Code number 027F0765 MEV, size 80-7

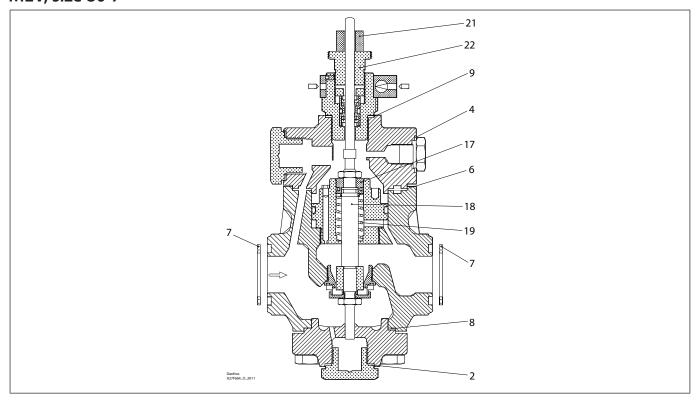


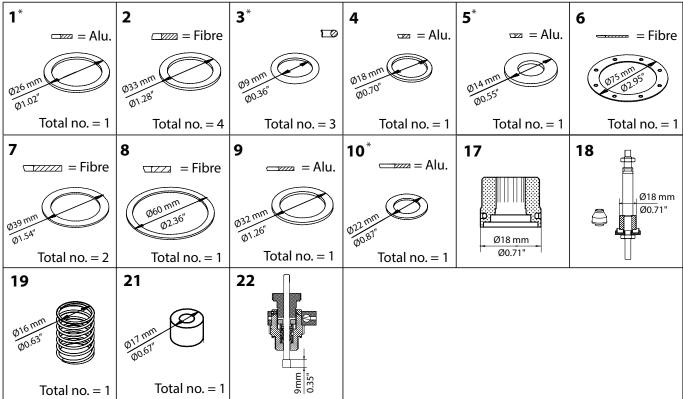


<sup>\*</sup>The spare part is included in the package but is not used for MEV 80-7.



# Overhaul kit | Code number 027F0766 MEV, size 125

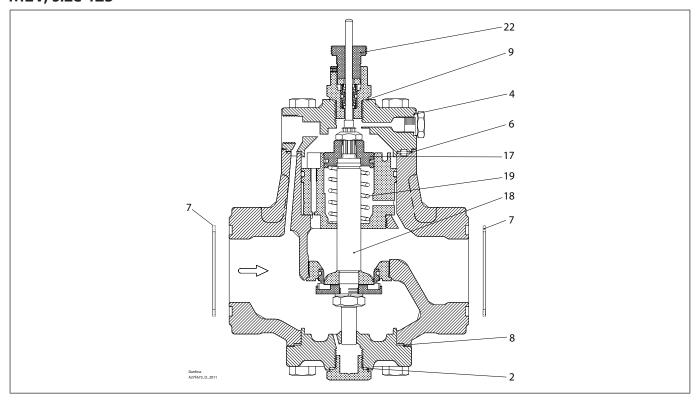


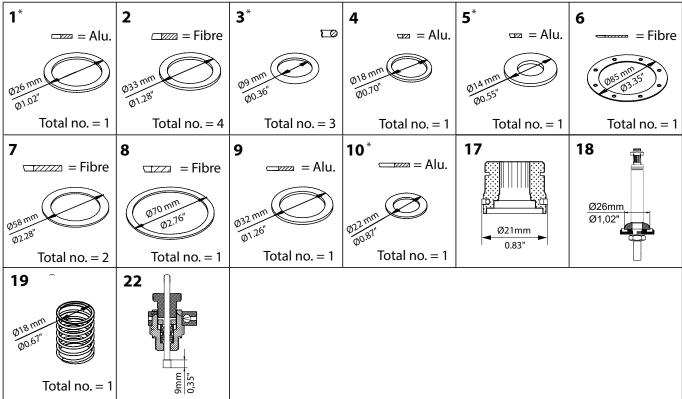


<sup>\*</sup>The spare part is included in the package but is not used for MEV 125.



# Overhaul kit | Code number 027F0767 MEV, size 200

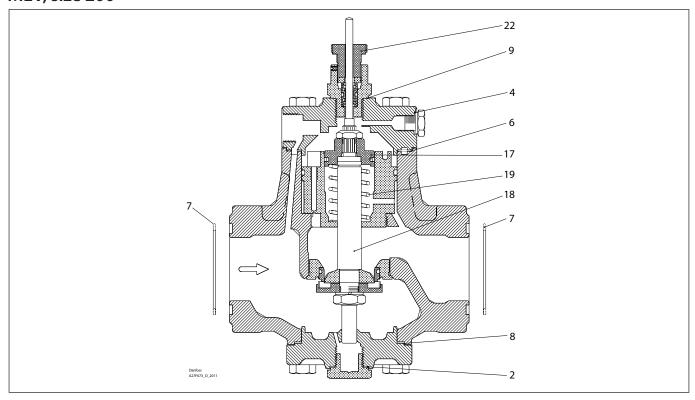


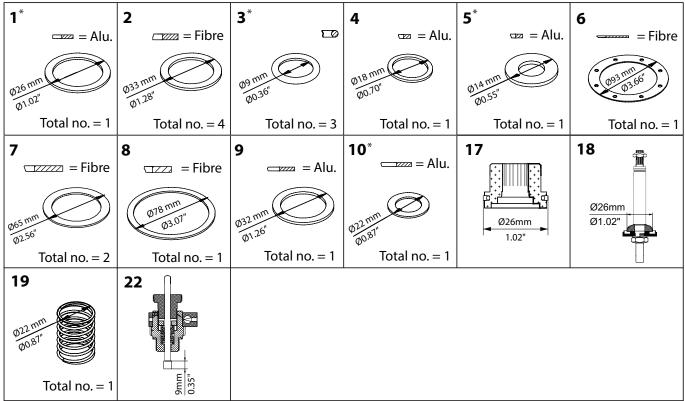


<sup>\*</sup>The spare part is included in the package but is not used for MEV 200.



# Overhaul kit | Code number 027F0768 MEV, size 300

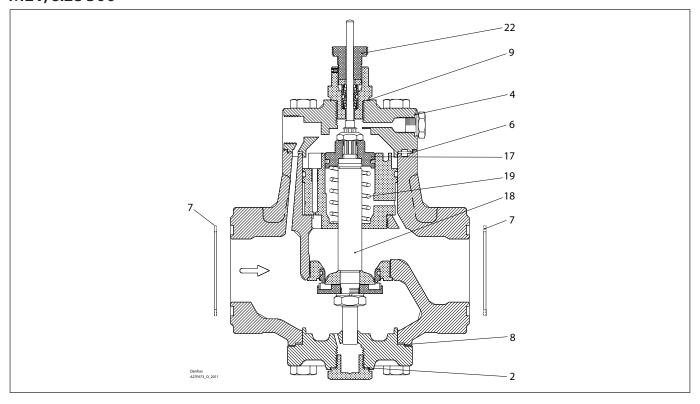


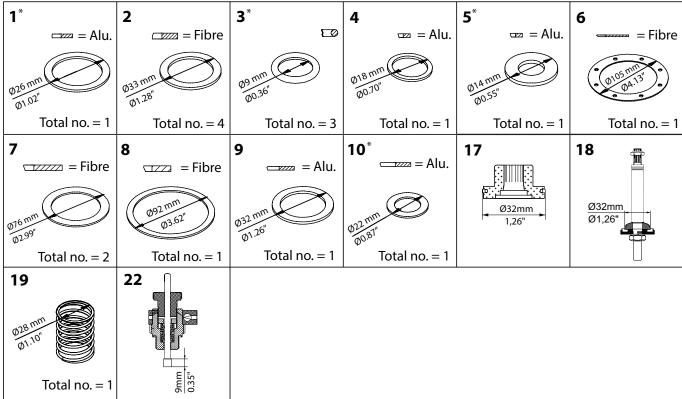


<sup>\*</sup>The spare part is included in the package but is not used for MEV 300.



# Overhaul kit | Code number 027F0769 MEV, size 500

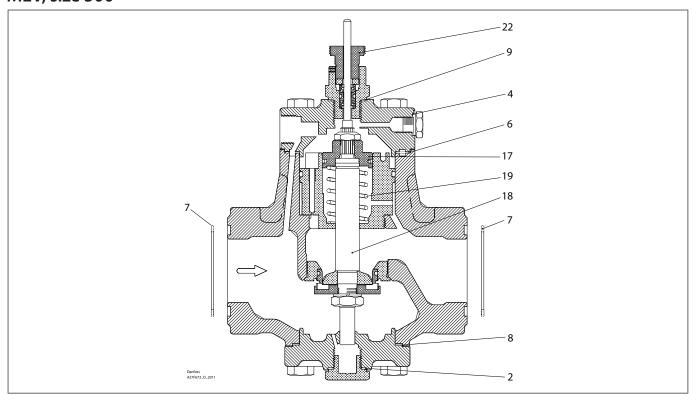


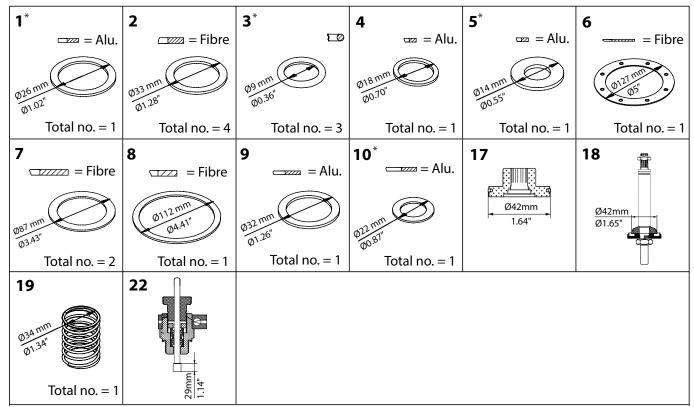


 $<sup>^{\</sup>star}$  The spare part is included in the package but is not used for MEV 500.



# Overhaul kit | Code number 027F0770 PMC, size 5

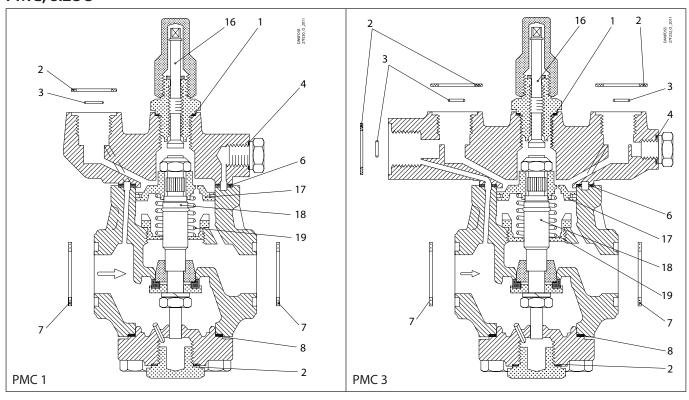


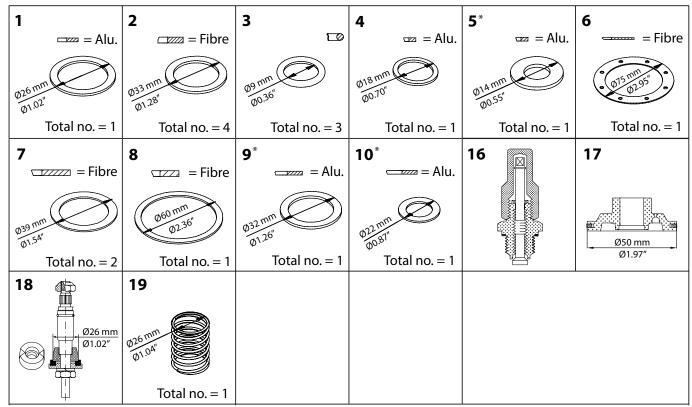


 $<sup>\</sup>mbox{\ensuremath{^{*}}}$  The spare part is included in the package but is not used for PMC 1 or PMC 3..



# Overhaul kit | Code number 027F0754 PMC, size 8

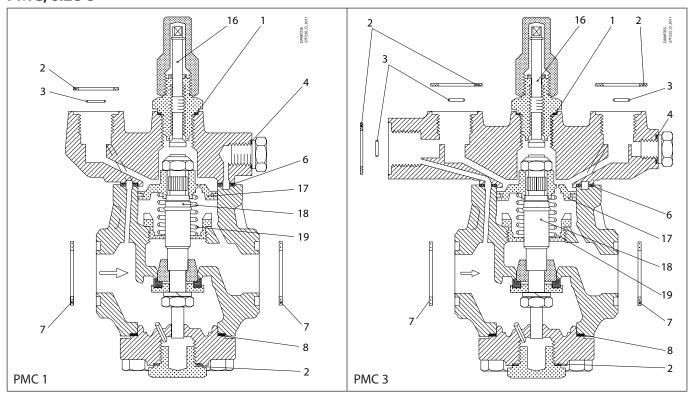


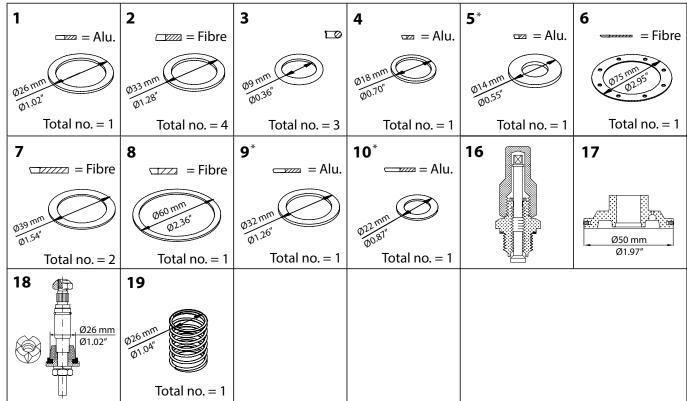


<sup>\*</sup> The spare part is included in the package but is not used for PMC 1 or PMC 3..



# Overhaul kit | Code number 027F0755 PMC, size 12

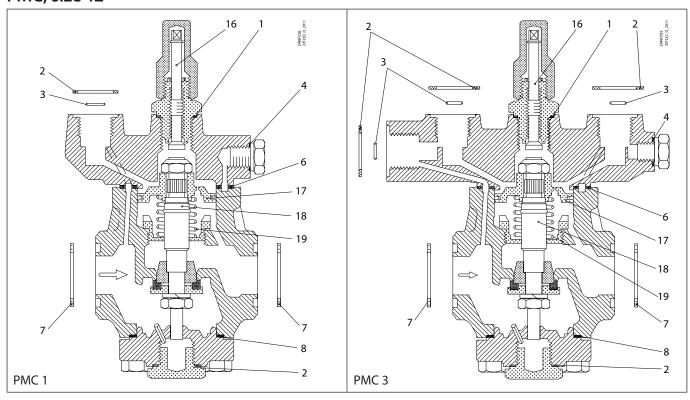


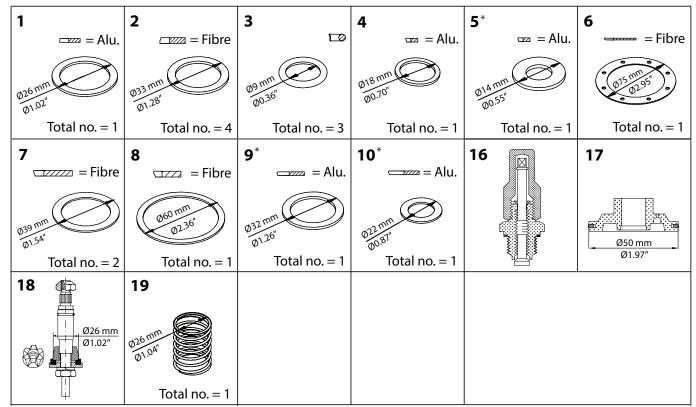


<sup>\*</sup> The spare part is included in the package but is not used for PMC 1 or PMC 3..



# Overhaul kit | Code number 027F0756 PMC, size 20

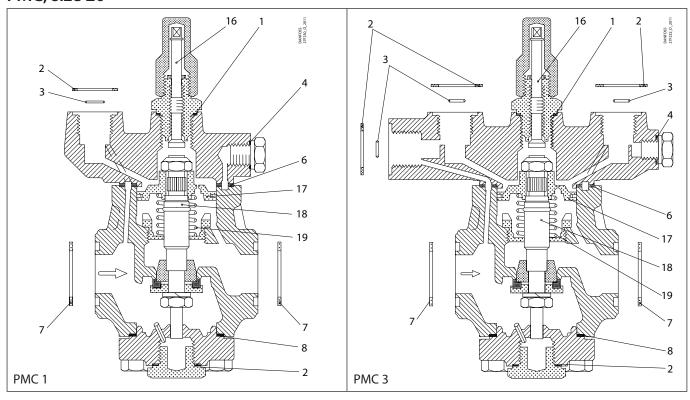

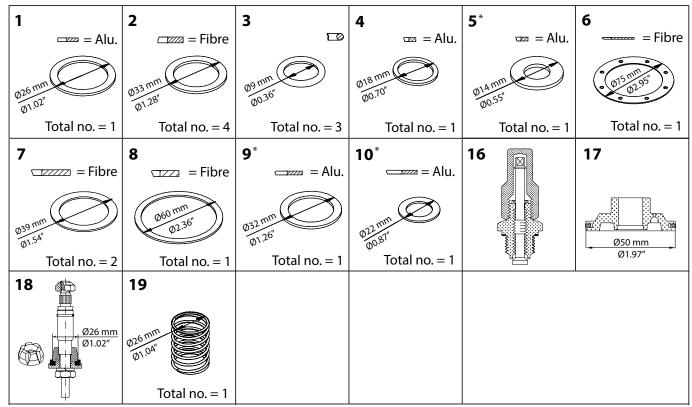

 $<sup>^{\</sup>ast}$  The spare part is included in the package but is not used for PMC 1 or PMC 3..




#### Accessories

#### ICV PM flanged valve housings

ICV PM flanged valve housings can replace the PM valves on already installed refrigeration systems.


Pressure range
The ICV PM valve housing is designed for a max. working pressure of 28 bar g (406 psig) and therefore a suitable replacement for PM valves in the service market. They also offer the same drop-in dimensions as the PM valves.

Description	Code no.
ICV 25 PM Valve housing	027H2119 *)
ICV 32 PM Valve housing	027H3129 *)
ICV 40 PM Valve housing	027H4128 *)
ICV 50 PM Valve housing	027H5127 **)
ICV 65 PM Valve housing	027H6128 **)

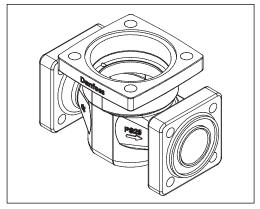

- \*) Includes ICV PM valve housing, flange gaskets and flange bolts.
  \*\*) Includes ICV PM valve housing, flange gaskets, flange bolts and flange nuts.

Function modules and top covers must be ordered separately (see the section "Ordering").

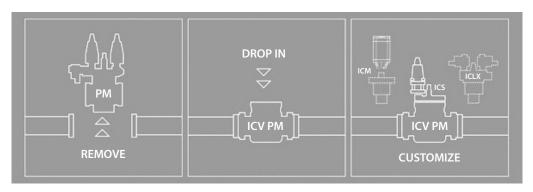


#### ICV (H)A4A flanged valve housings

ICV (H)A4A flanged valve housings can replace the (H) A4A valves on already installed refrigeration systems.

#### Pressure range

The ICV (H)A4A valve housing is designed for a max. working pressure of 28 bar g (406 psig) and therefore a suitable replacement for (H)A4A valves in the service market. They also offer the same drop-in dimensions as the (H)A4A valves.

Description	Code no.	
ICV 25 (H)A4A Valve housing	027H2304 *)	
ICV 32 A4A Valve housing	027H3130 *)	
ICV 32 HA4A Valve housing	027H3131 *)	
ICV 40 (H)A4A Valve housing	027H4129 *)	
ICV 50 (H)A4A Valve housing	027H5128 *)	
ICV 65 (H)A4A Valve housing	027H6129 *)	

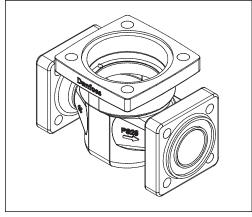

<sup>\*)</sup> Includes ICV (H)A4A valve housing, flange gaskets, flange bolts and flange nuts.

Function modules and top covers must be ordered separately (see the section "Ordering").

